
Installation instructions Multi-temperature wine cabinet

Page 14

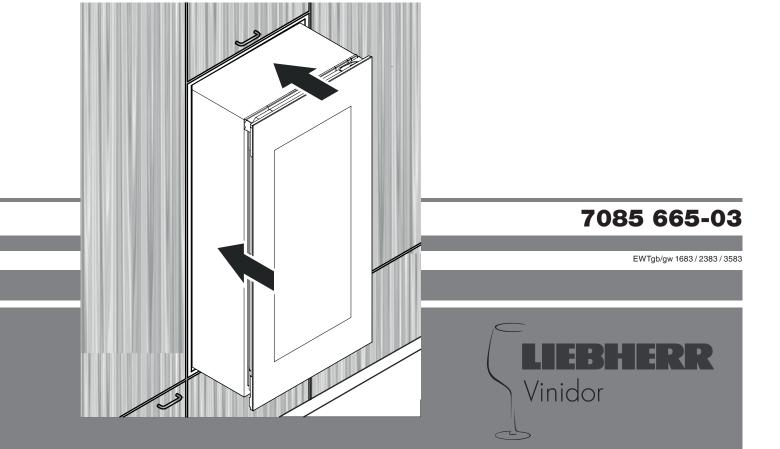



EN

Content

Scope of delivery	14
Appliance dimensions	
Transporting the appliance	
Installation dimensions	
Appliance venting	
Changing over door hinges	
Installing the appliance	20
Adjusting the door	24


Scope of delivery

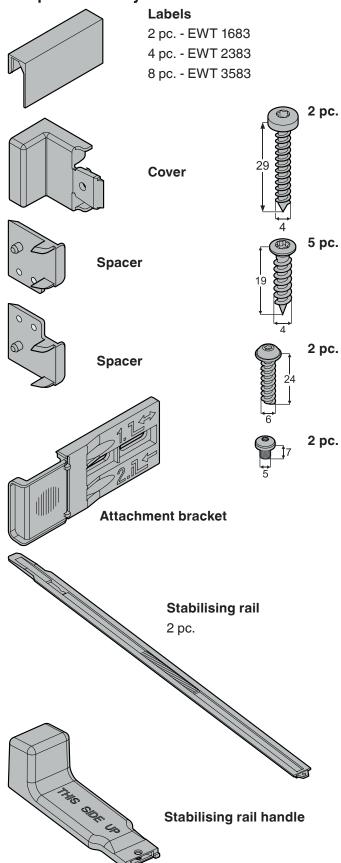

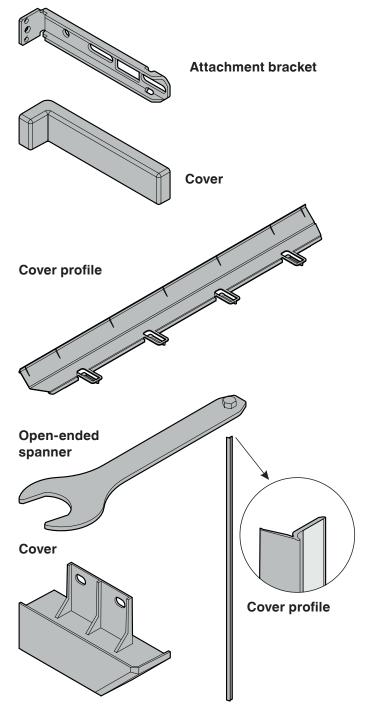


Appliance dimensions


Α	510 mm
в	EWT 16 906 mm EWT 23 1233 mm
	EWT 35 1816 mm
С	572 mm
D	EWT 16 872 mm
	EWT 23 1218 mm
	EWT 35 1770 mm
E	595 mm
F	557 mm
G	254 mm
Н	1100 mm
I	115°
	EWT 16 26.5 mm
J	EWT 23 7.5 mm
	EWT 35 27 mm
	EWT 16 7.5 mm
K	EWT 23 7.5 mm EWT 35 19 mm

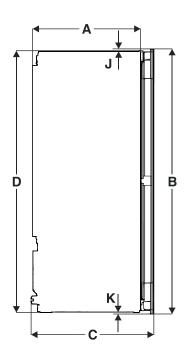

Front view

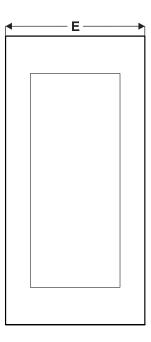

View from above

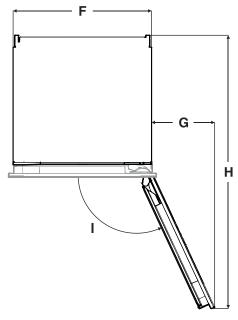


Transporting the appliance

 $Danger of injury \, or \, damage \, as \, a \, result of incorrect \, transport!$

- Transport the appliance in a packed condition.
- Transport the appliance upright.
- Do not transport the appliance without assistance.



An appliance which has not been built in can topple over!

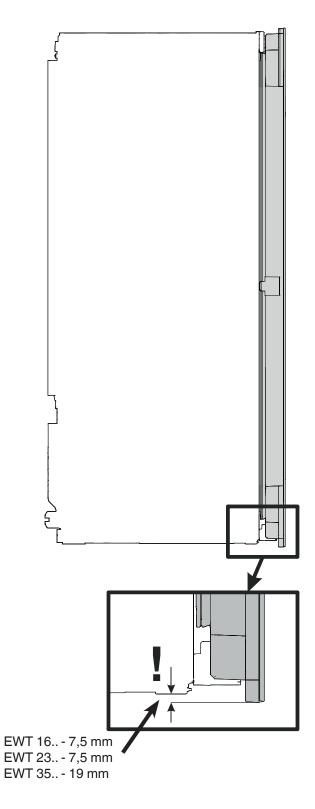


Installation dimensions

Important note

In order to avoid any problems when installing the appliance and to avoid damage to the appliance, the following conditions must be complied with.

The kitchen unit must be aligned horizontally and vertically!

Minimum wall thickness of the body of the unit = 16 mm.

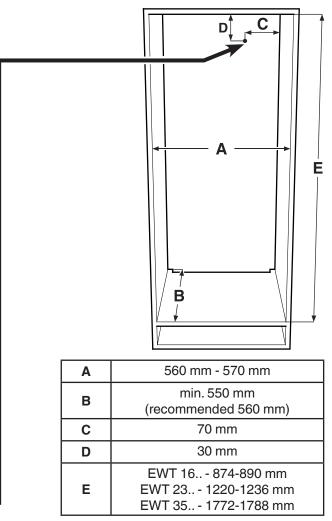

In this area, the mains power cable comes out of the appliance rear.

Free length of the mains power cable:




Choose the position of the socket considering these specifications.

The socket must not be situated behind the appliance and must be easily accessible.

Appliance venting



The clear ventilation crosssection must be at least 200 cm^2 from the lower ventilation opening right to the upper one.

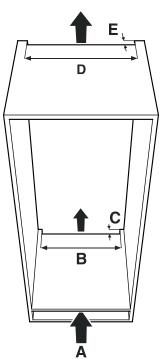


Α	min. 200 cm ²
В	min. 500 mm
С	min. 40 mm
D	min. 500 mm
E	min. 40 mm

Types of air outlet

1 Directly above the appliance

- ② Above the top unit
- ③ From the front of the top unit with decor grille

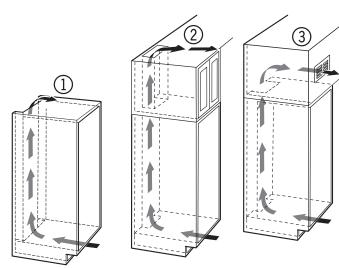

Important note

When using decor grilles, it must be taken into account that the clear ventilation cross-section corresponds to the sum of the individual openings in the grille.

A cut-out section of merely 200 cm² for installing the ventilation grille is thus not sufficient.

Changing over door hinges

Door hinges should only be changed by a trained expert.

Changing the door hinges must be done by two people.




High door weight.

Danger of injury and damage to property. Only complete the modification work if you can lift a weight of 60 kg.




Risk of injury due to the door dropping out! If the fastening parts are not screwed into place firmly enough, the door may drop out. This may lead to severe injuries. What is more, the door may not close and therefore the appliance may fail to cool properly.

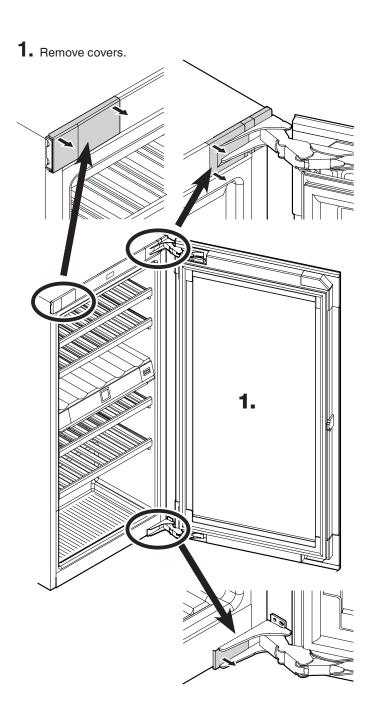


2. Remove the transportation safety component.


3. Remove seal.

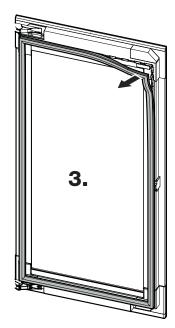


4. Remove cover.

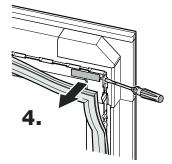


5. Remove cover.

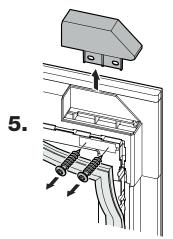

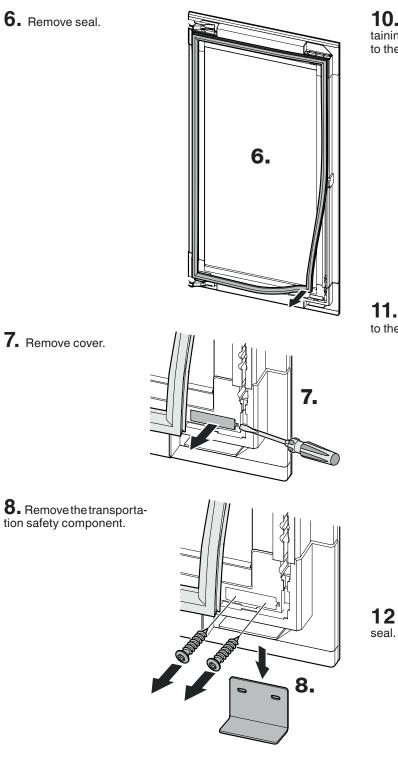


10. Remove the upper re-taining bracket and transfer to the opposite side.

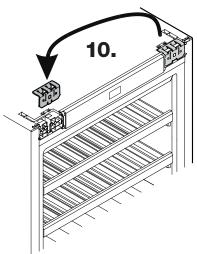


11. Transfer the stop to the opposite side.

13. Remove cov-

ers.

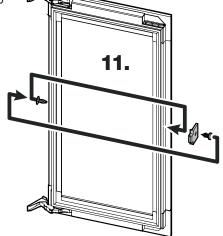

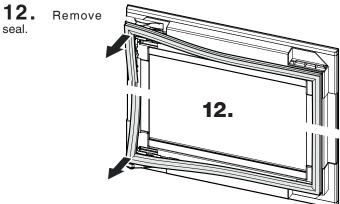


13.


9. Remove the door.

The door must now be held secure by somebody.


Carefully place the door on a soft surface.

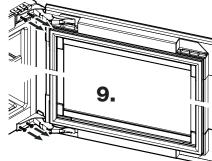


Risk of injury if hinges fold! - Leave hinges open.

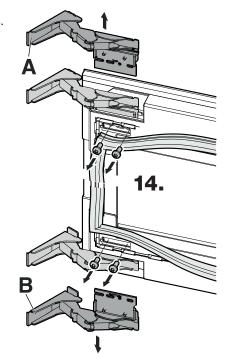

15. Re-fit the hinges on the opposite side at diagonals to the original position (see section entitled "Adjusting the door", page 24).

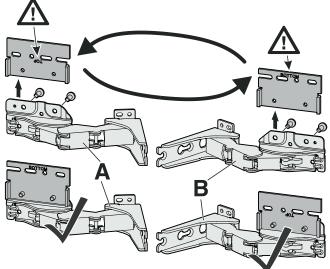




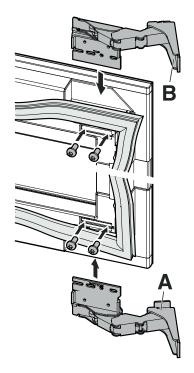


16. Screw on covers.


18. Fit seal.

19. Fit the covers.

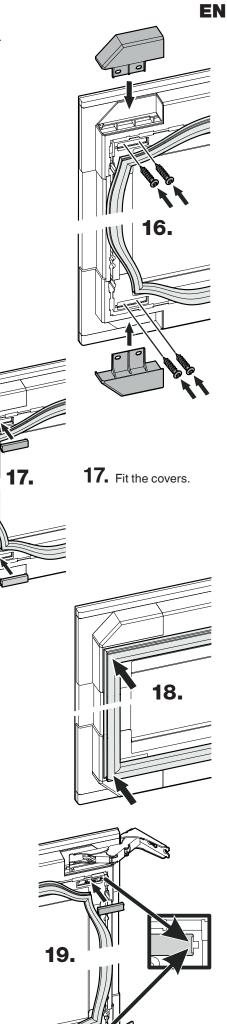


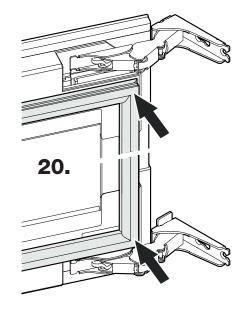

21. Fit the door on the appliance. **Notice** The door must now be held secure by somebody.

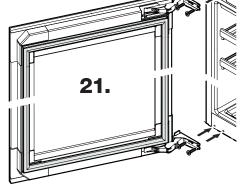

22. Fit covers and click into place.

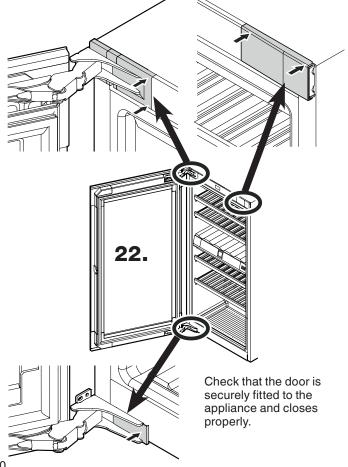

Installing the appliance

The installation work should only be carried out by trained personnel.

Two people are required for the installation work.

Note

Check the installation dimensions before installation. The intermediate panel and side wall of the kitchen unit must be perpendicular to each other.




Fire hazard due to dampness!

If live parts or the mains power cable become damp this may cause short circuits.

- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

- Only use the appliance when it is installed.

1. EWT 3583 - Remove the transportation safety component.

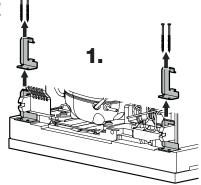

2. Route the mains cable towards the socket.


🕂 WARNING! 🛛

Fire hazard from short-circuiting!


- When pushing the appliance into the recess, take care not to crush, jam or damage the mains power cable.

- Do not operate the appliance with a defective mains power cable.


3. Slide the appliance two-thirds of the way into the kitchen unit. When sliding in the appliance, make sure that the mains cable is not damaged.

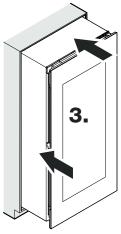


- 4. Screw in the adjustable feet as far as they will go.
- 4.
- **6.** Remove the transportation safety component.

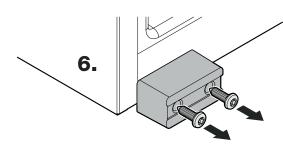



7. Only if the wall thickness is less than 19 mm: Fit the spacers.

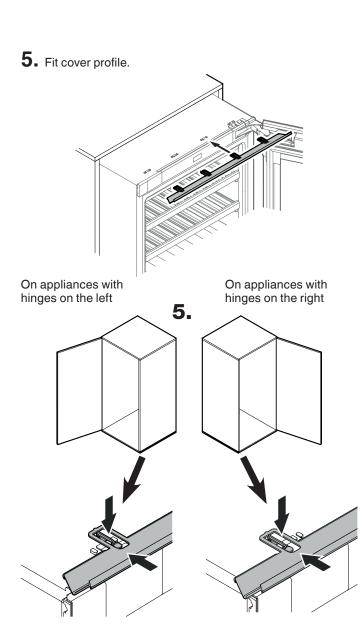

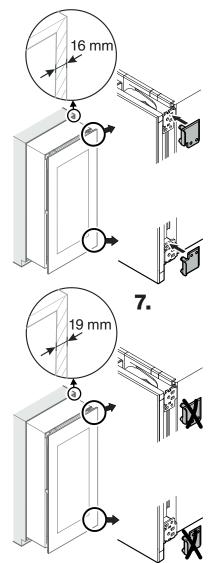


8. Remove cover.

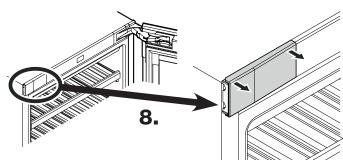


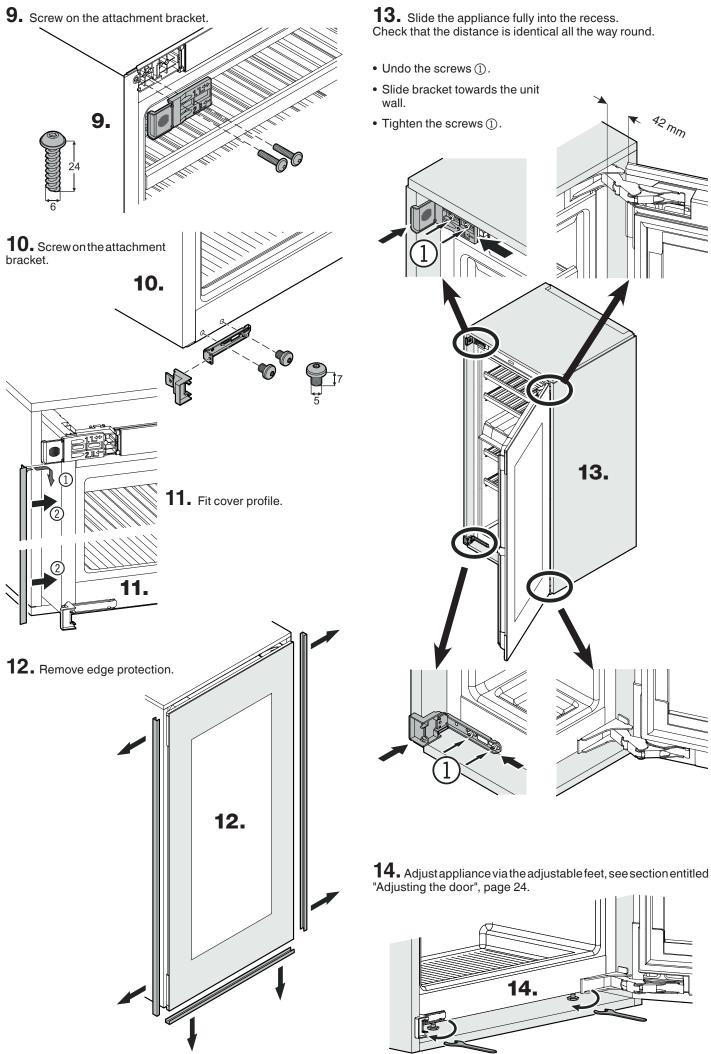


15. Secure the appliance to the kitchen unit using screws through the hinges and attachment brackets.

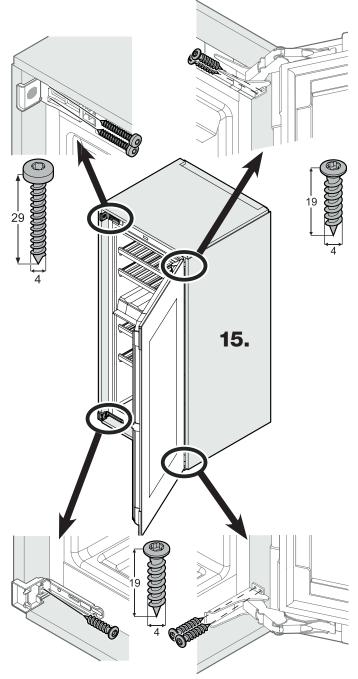


16. Snap off and remove the front part of the stop bracket.

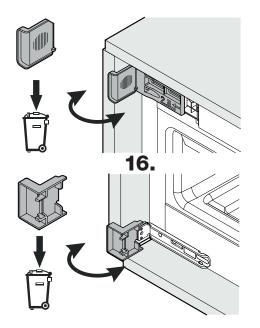


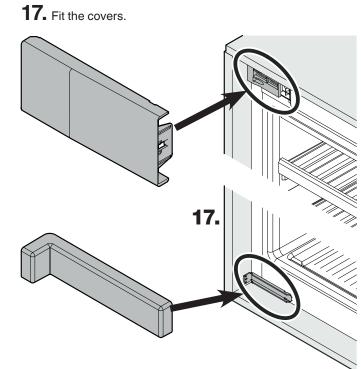


18. Stabilise the appliance at the back at the bottom: Fit the handle ① to the stabilising rail ② and slide the stabilising rail into the floor of the appliance.

Remove the handle and repeat this procedure with the second stabilising rail.

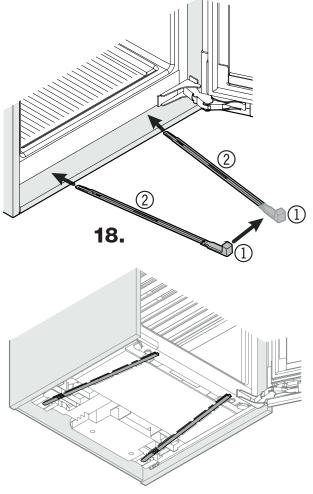


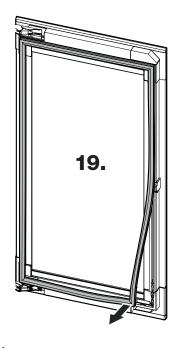


20. Remove cover.

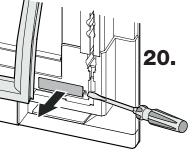


21. Remove the transportation safety component.

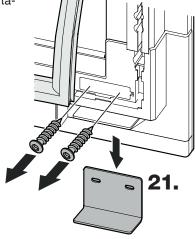

22. Screw on the cover.

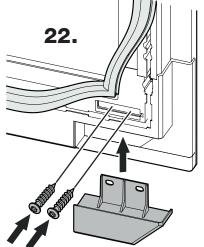


23. Fit cover.

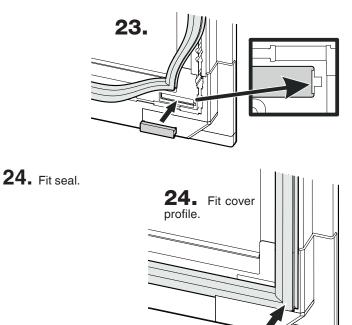


Check that the door is securely fitted to the appliance and closes properly.


Installation is now complete.

Adjusting the door

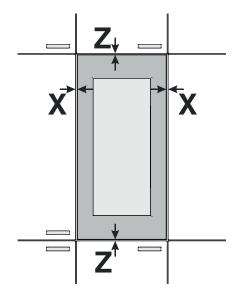


1. Remove seal.

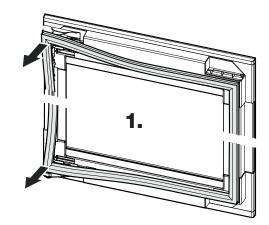

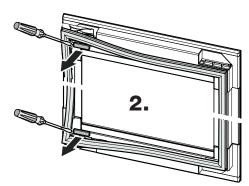


3.


- Remove screws (1).
- Transfer to position 2.
- Undo screws ③.
- Adjust clearance.
- Tighten screws (1) and (3).

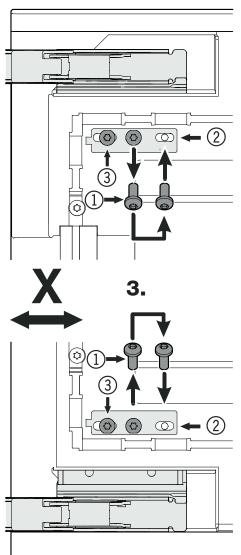


4. Fit the covers.

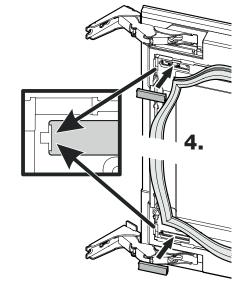

5. Fit seal.

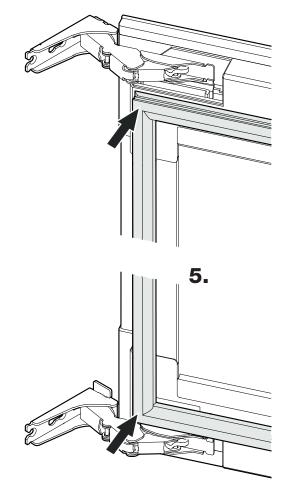



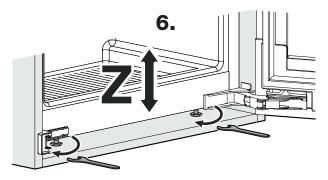



Liebherr Hausgeräte Lienz GmbH Dr.-Hans-Liebherr-Strasse 1 A-9900 Lienz Österreich www.liebherr.com

