

The Samsung logo is displayed in white, uppercase letters inside a dark grey, horizontally-oriented oval shape.

HW-J6001

User manual

Curved Soundbar

Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

FEATURES

Samsung Remote App

Control your Soundbar in the palm of your hand with the Samsung Audio Remote App*. This convenient app is a control hub for basic controls like power, volume, and media controls, as well as custom settings like equaliser setting.

Surround Sound Expansion

The Surround Sound Expansion feature adds depth and spaciousness to your listening experience.

TV SoundConnect

Connect your TV and Soundbar easily through Bluetooth with TV SoundConnect. The absence of trailing wires between the Soundbar and TV allows you to showcase the slim and sleek design of both systems, while maintaining a clean look in your living environment. Easily control the Soundbar and TV from a single TV remote.

HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture. The unit is also equipped with the ARC function which lets you listen to sound from your TV through the Soundbar via an HDMI cable. This function is only available if you connect the unit to an ARC compliant TV.

USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Soundbar's USB HOST function.

Bluetooth Function

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

LICENCES



Manufactured under licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see <http://patents.dts.com>. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.





HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

SAFETY INFORMATION

SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN			This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.
				This symbol indicates important instructions accompanying the product.

WARNING : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

 
CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.


CAUTION

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.


PRECAUTIONS

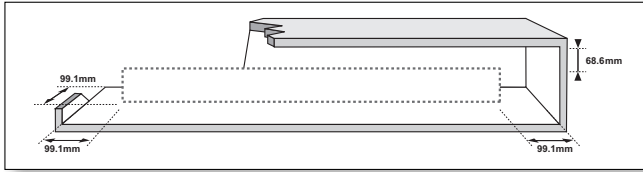


Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7–10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

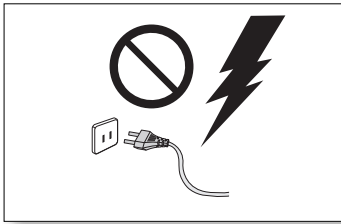 

 
During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

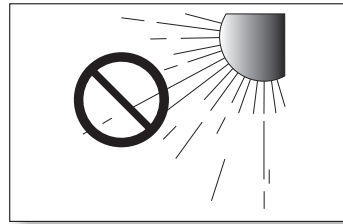

 Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.

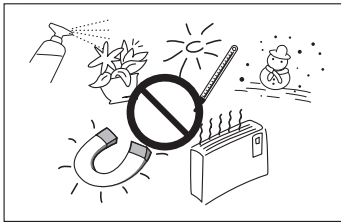

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

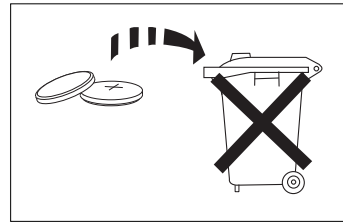 

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. Do not dispose of batteries in a fire. Do not short circuit, disassemble, or overheat the batteries. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.



WARNING, DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD, The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

CONTENTS

2 GETTING STARTED

- 2 Features
- 3 Safety Information
- 6 What's Included

7 DESCRIPTIONS

- 7 Top / Front Panel
- 8 Rear / Bottom Panel
- 9 Remote Control

11 INSTALLATION

- 11 **Installing the Soundbar**
 - 11 Installing the Wall Mount
 - 14 Attaching the Soundbar to your TV's Stand
 - 14 Installing Soundbar to Free-Standing

15 CONNECTIONS

- 15 **Connecting the Subwoofer**
- 17 **Connecting to a TV**
 - 17 Connections with TV Using HDMI (Digital) Cable
 - 17 Connections with TV Using Optical (Digital) Cable
- 18 TV SoundConnect
- 20 **Connections with External Device**
 - 20 HDMI Cable
 - 20 Optical or AUX Cable
 - 21 USB

23 FUNCTIONS

- 23 Input Mode
- 24 Bluetooth
- 27 Software Update

28 TROUBLESHOOTING

- 28 Troubleshooting

29 APPENDIX

- 29 Specifications



Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

WHAT'S INCLUDED


BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.


► Icons used in this manual

Icon	Term	Definition
	Caution	Indicates a situation where a function does not operate or settings may be cancelled.
	Note	Indicates tips or instructions on the page that help you operate a function.

 
Check for the supplied accessories shown below.




**Remote Control /
Lithium Battery
(3V : CR2032)**




Power Cord : 2EA




DC Adapter

 


HDMI Cable



 
USB Cable




User Manual



Holder-Fix Mount : 2EA



Bracket-Wall : 2EA

 


Wall Mount Guide




- The appearance of the accessories may differ slightly from the illustrations above.
- Use the dedicated USB cable to connect external USB devices to the unit.

TOP / FRONT PANEL

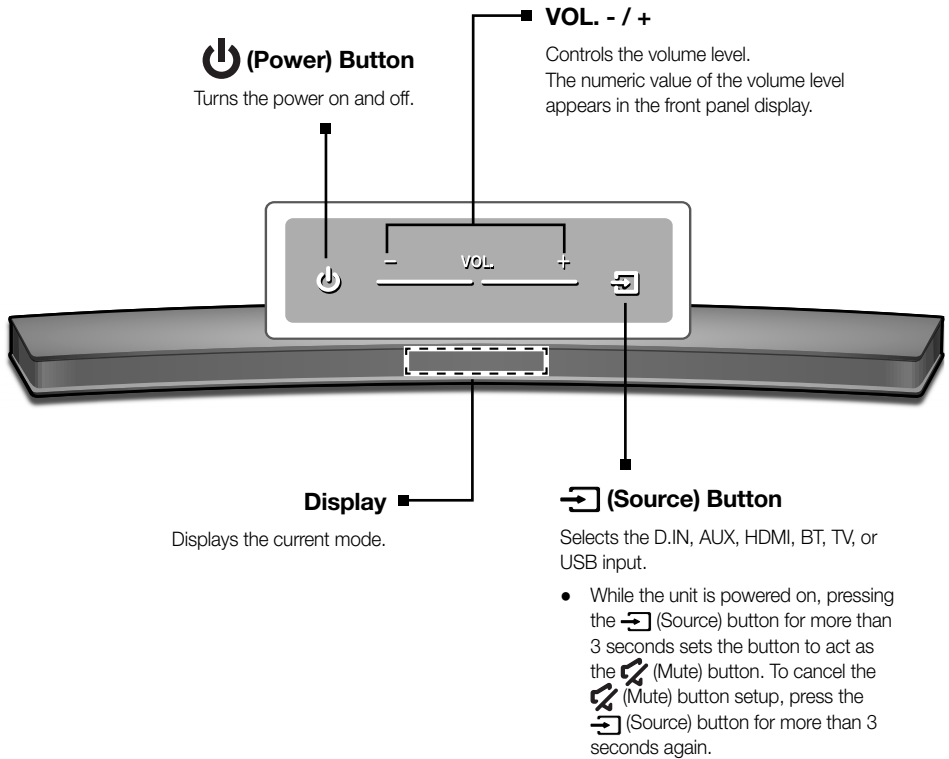

- When you plug in the AC cord, the power key will work in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy the sound only from the Soundbar, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

 REAR / BOTTOM PANEL

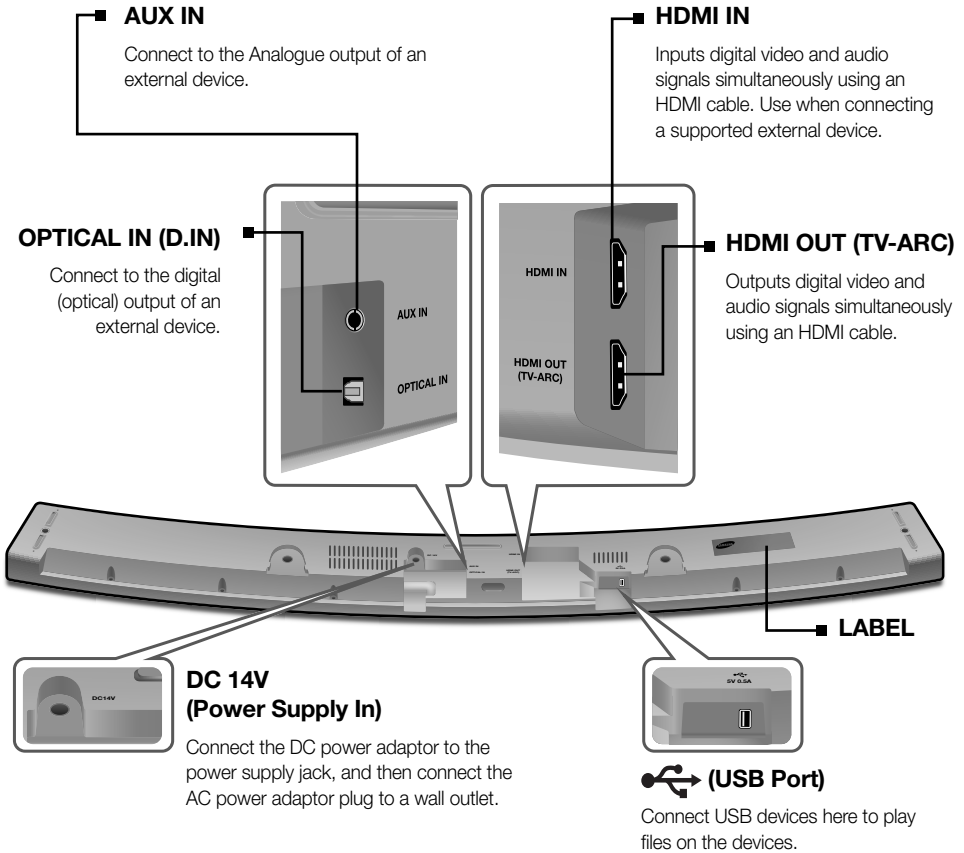

- When disconnecting the power cable of the AC power adaptor from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

REMOTE CONTROL

SOURCE
Press to select a source connected to the Soundbar.

Mute
You can turn the volume down to 0 with the push of a button. Press again to restore the sound to the previous volume level.

Repeat
Press to set the Repeat function during music playback from a USB device.
OFF - REPEAT : Cancells Repeat Playback.
TRACK - REPEAT : Repeatedly play a track.
ALL - REPEAT : Repeatedly play all tracks.

RANDOM - REPEAT : Plays tracks in random order. (A track that has already been played may be played again.)

Skip Forward
If there is more than one file on the device you are playing, and you press the ►►► button, the next file is selected.

 
SOUND CONTROL
Press to select **TREBLE**, **BASS**, or **AUDIO SYNC**. Then, use the ◀◀◀, ▶▶▶ buttons to adjust the Treble, Bass volume from -6 to +6.
Press and hold the **SOUND CONTROL** button for about 5 seconds to adjust the sound for each frequency band. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz, 10KHz and SW are selectable and each can be adjusted to a setting between -6 and +6.
If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **SOUND CONTROL** button to sync the audio with the video. Use the ◀◀◀, ▶▶▶ buttons to set the audio delay between 0 ms and 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not be available.

AUTO POWER
Press the **AUTO POWER** button to turn the Anynet+ function on or off. (Default : Auto Power Link OFF, **ON - ANYNET+ / OFF - POWER LINK** or **OFF - ANYNET+ / ON - POWER LINK**). The Anynet+ function lets you control the Soundbar with the remote from an Anynet+ compatible Samsung TV. The Soundbar must be connected to the TV via an HDMI cable.

* Auto Power Link
Synchronizes the Soundbar to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV. (See page 18)



- Soundbar is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

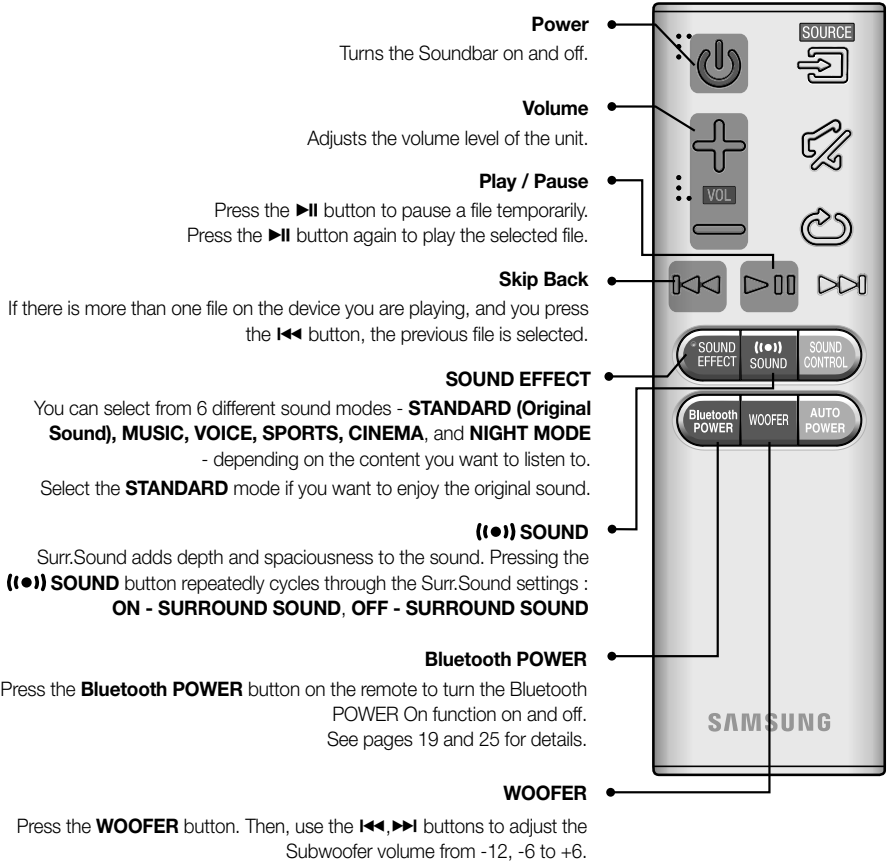

INSTALLING THE BATTERY IN THE REMOTE CONTROL

 
1. Use a suitable coin to turn the remote control's battery cover counterclockwise to remove it as shown in the figure above.
2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '+' marks side by side as shown in the figure above.
3. Use a suitable coin to turn the remote control battery cover clockwise as far as it will go to fix it in place.

INSTALLING THE SOUNDBAR

INSTALLING THE WALL MOUNT


► Installation Precautions

- Install on a vertical wall only.
- For the installation, avoid a location with high temperature or humidity, or a wall that cannot sustain the weight of the set.
- Check the strength of the wall. If the wall is not strong enough to support the unit, reinforce the wall or install the unit on a different wall that can support the unit's weight.
- Purchase and use the fixing screws or anchors appropriate for the kind of wall you have (plaster board, iron board, wood, etc.). If possible, fix the support screws into wall studs.
- Purchase wall mounting screws according to the type and thickness of the wall you will mount the Soundbar on.
 - Diameter : M5
 - Length: L 35 mm or longer recommended.
- Connect cables from the unit to external devices before you install it on the wall.
- Make sure the unit is turned off and unplugged before you install it. Otherwise, it may cause an electric shock.

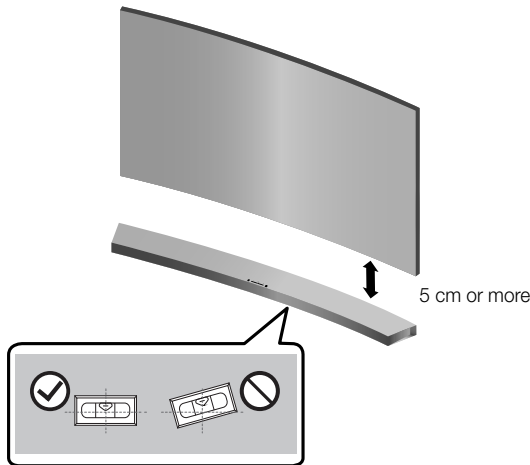


1. Place the installation guide against the wall surface.
 - The installation guide must be level.
 - If the TV is mounted on the wall, install the Soundbar at least 5 cm below the TV.

 
INSTALLATION

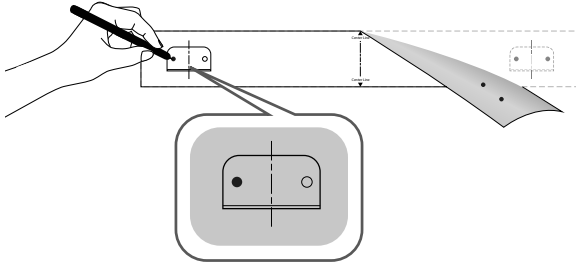

 
2. Mark the location where the screws will go through on the wall, and then remove the installation guide. Next, drill holes for the screws using an appropriately sized drill bit.

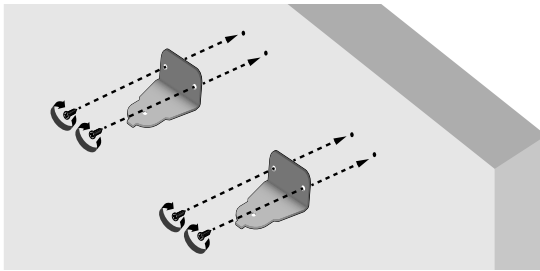

 3. Fasten the **Bracket-Wall** (2EA) and screws to the marked locations.

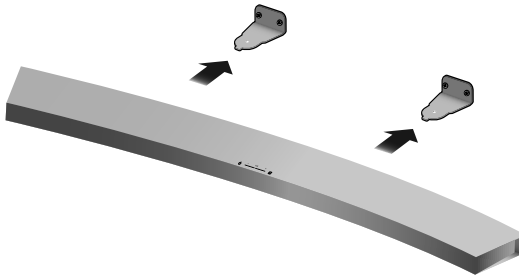

 4. Lift up the product after inserting the **Bracket-Wall** as shown.

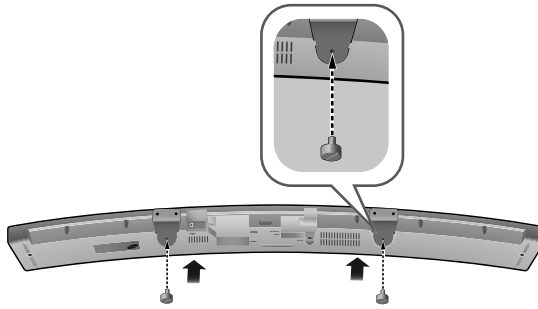

5. Insert and fasten **Holder-Fix Mount** into each hole on the product's bottom side. The product is fixed to the **Bracket-Wall**.



 
- Do not hang onto the installed unit and avoid striking or dropping the unit.
- Secure the unit firmly to the wall so that it does not fall off. If the unit falls off, it may cause an injury or damage the product.
- When the unit is installed on a wall, please make sure that children do not pull any of the connecting cables, as it may cause it to fall.
- For the optimal performance of a wall mount installation, install the speaker system at least 5 cm below the TV, if the TV is mounted on the wall.
- For your safety, if you do not mount the unit on the wall, install it on a secure, flat surface where it is unlikely to fall.

ATTACHING THE SOUNDBAR TO YOUR TV'S STAND

You can attach the Soundbar to your TV's stand if you have a Samsung TV that has a stand that is compatible with this Soundbar.



- This Soundbar is compatible with model JU6700, JU6500 and JU7500, 48 inch, 55 inch and 65 inch, JU6610 - 48 inch and 55 inch, 2015 Samsung curved TVs. Please visit the home page of Samsung Electronics (www.Samsung.com) to see a detailed list of the compatible models.
- This Soundbar cannot be installed to a non-compatible TV, in either form of TV mount or TV stand.

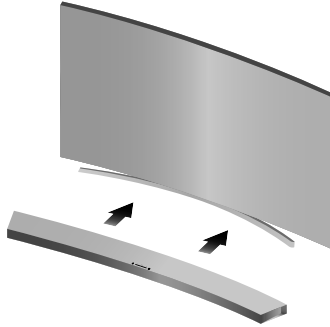

1. Align the Soundbar's centre with the centre of the base of the TV, and then carefully push it onto the stand as far as it will go, as shown in the illustration. Be careful not to unbalance the TV.

INSTALLING SOUNDBAR TO FREE-STANDING



1. Centre the Soundbar on the flat area in front of the TV.



- Install it on a level and firm surface.



- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

CONNECTING THE SUBWOOFER

 
CONNECTING TO THE SUBWOOFER AUTOMATICALLY


The main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on.

- If it is completely connected, the blue LED in the subwoofer stops blinking.

CONNECTING TO THE SUBWOOFER MANUALLY

The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on. If the Link indicator does not light when the main unit and subwoofer are turned on, please set the ID by following the procedure below.

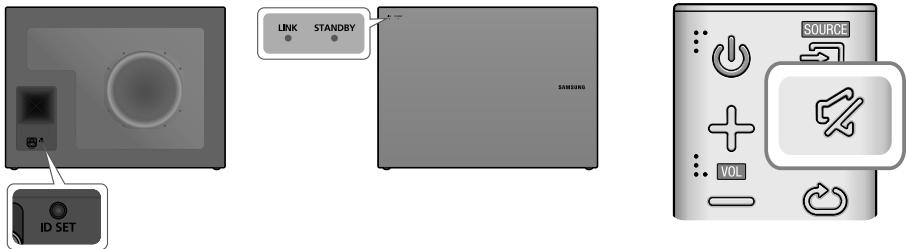

1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
 - The STANDBY indicator is turned off and the LINK indicator (Blue LED) blinks quickly.
3. While the main unit is powered off (in STANDBY mode), press and hold the  (Mute) on the remote control for 5 seconds.
4. The **ID SET** message appears on the Soundbar's display.
5. To finalise the link, turn the main unit's power on while the subwoofer's Blue LED blinks.
 - The main unit and the subwoofer should now be linked (connected).
 - The Link indicator (Blue LED) on the subwoofer should be on.
 - If the Link indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
 - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 10)

CONNECTIONS



 
- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will be in standby mode and the STANDBY LED on the upper side will come on after the Link indicator (Blue LED) blinks for 30 seconds.
- If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
- The transmission distance of the wireless signal between the main unit and subwoofer is about 10 meters, but may vary depending on your operating environment. If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make a wireless connection, follow steps 1-5 on the previous page to re-set the connection between the main unit and wireless subwoofer.

 


- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
 - For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.
-

CONNECTING TO A TV

CONNECTIONS WITH TV USING HDMI (DIGITAL) CABLE

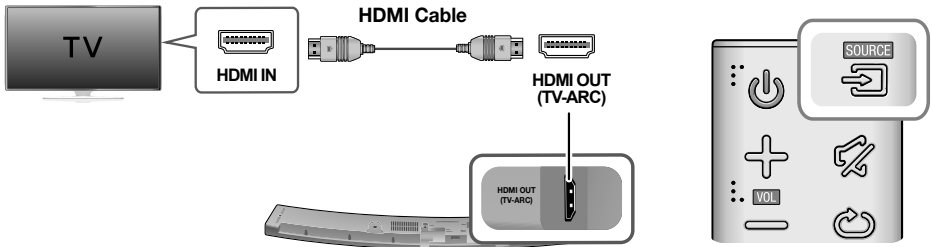



1. Connect an HDMI cable from the **HDMI OUT (TV-ARC)** jack on the back of the product to the HDMI IN jack on your TV.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.



- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
- If the TV provides an ARC port, connect the HDMI cable to the HDMI IN (ARC) port.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

  CONNECTIONS WITH TV USING OPTICAL (DIGITAL) CABLE

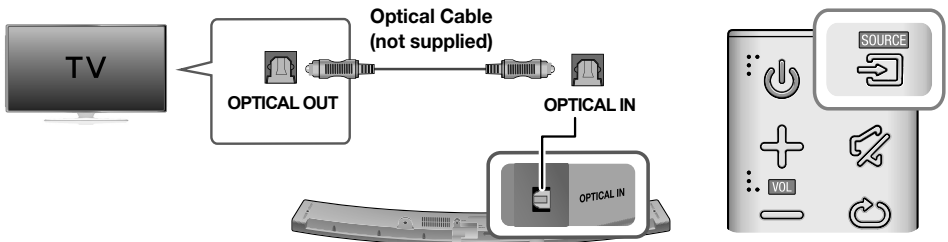


1. Connect **OPTICAL IN** (Audio) on the Soundbar to the OPTICAL OUT jack of the TV.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

► **Auto Power Link**

If you have connected the main unit to a TV with a digital optical cable, set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

AUTO POWER LINK	Display
ON	OFF - ANYNET+ / ON - POWER LINK
OFF	ON - ANYNET+ / OFF - POWER LINK

 
1. Connect the Soundbar and a TV with an Optical cable (not supplied).
2. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **D.IN** mode.
3. Press the **AUTO POWER** button on the remote control to toggle the Auto Power Link function on and off.




- Depending on the connected device, Auto Power Link may not function.

TV SOUNDCONNECT

  You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

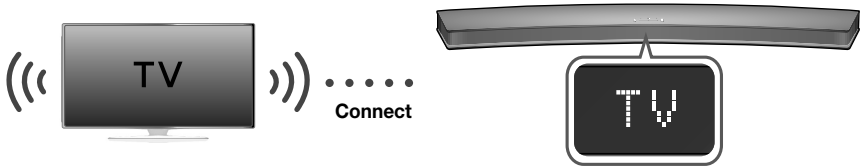

1. Turn on the TV and Soundbar.
 - Turn on the menu of the TV.
 - Move to Speaker Settings on "Sound" tab.
 - Set the "Add New Device" menu to "On".
2. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears.
4. Select **<Yes>** to finish connecting the TV and Soundbar using the TV's remote control.



- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, and then press the ►|| button on the remote control for 5 seconds to connect to another TV.



- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.)
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 10 meters, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
 - Recommended pairing range: within 2 meters.
 - Recommended operational range: within 10 meters.
- The Play/Pause, Next, and Prev buttons on the Soundbar or Soundbar's remote do not control the TV.

► Using the Bluetooth POWER On function

The Bluetooth POWER On function is available after you have successfully connected the Soundbar to a Bluetooth compatible TV using TV SoundConnect. When the Bluetooth POWER On function is ON, turning the connected TV on or off will turn the Soundbar's power on and off as well.

1. Connect the TV to your Soundbar using the TV SoundConnect function.
2. Press the **Bluetooth POWER** button on the Soundbar remote. **ON - BLUETOOTH POWER** appears on the Soundbar's display.
 - **ON - BLUETOOTH POWER** : The Soundbar turns on and off when you turn the TV on or off.
 - **OFF - BLUETOOTH POWER** : The Soundbar only turns off when you turn the TV off.



 
- This function is supported by some Samsung TVs released from 2013 on.


CONNECTIONS WITH EXTERNAL DEVICE

HDMI CABLE

HDMI is the standard digital interface for connecting to TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.


HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

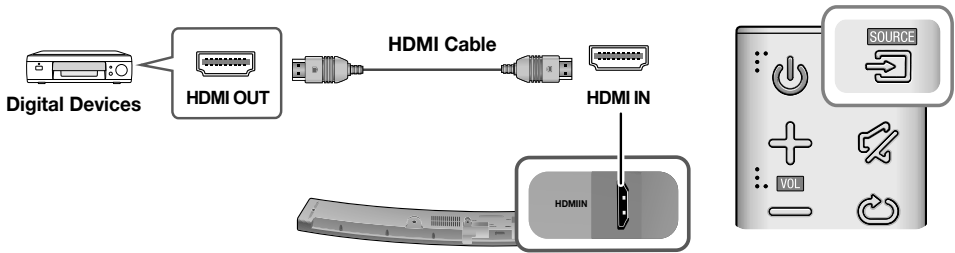


1. Connect an HDMI cable from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **HDMI** mode.

OPTICAL OR AUX CABLE

 
This unit comes equipped with one optical in digital jack and one audio analogue in jack, giving you two ways to connect it to an External Devices.

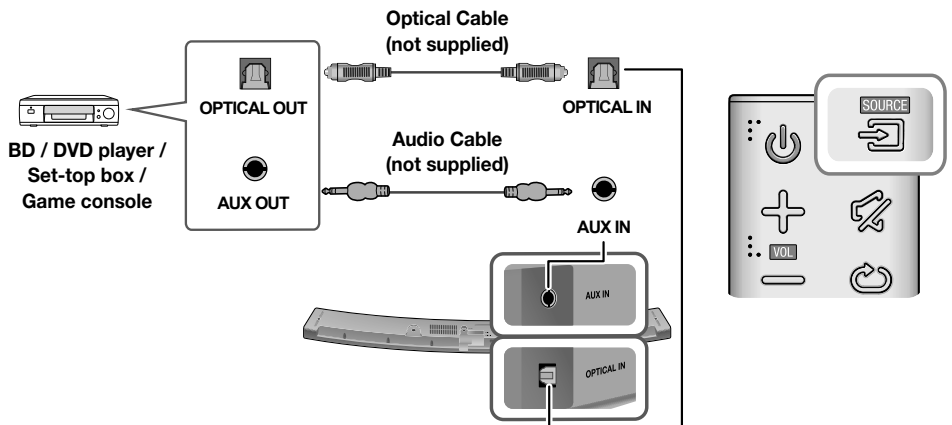

► AUX Cable

 
1. Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the Source Device.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **AUX** mode.

 
► Optical Cable

1. Connect **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the Source Device.
2. Press the  (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

USB

 You can play music files located on USB storage devices through the Soundbar.

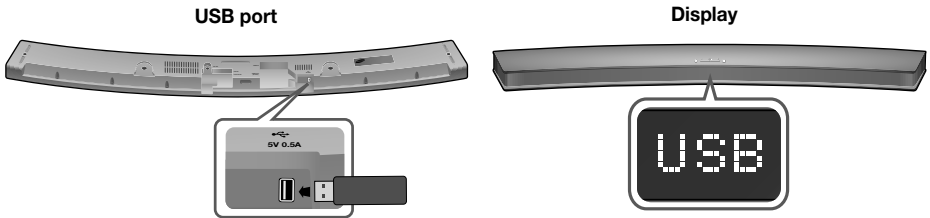

1. Connect the USB device to the USB port on the back of the product.
2. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
 - The Soundbar connection to the USB device is complete.
 - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 25 minutes.

► Before you connect a USB device

Be aware of the following:

- If the file name of a file or folder on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
 - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.

CONNECTIONS

- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:


Extension	Codec	Sampling Rate	Bit rate
*.mp3	MPEG 1 Layer2	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 1 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2.5 Layer3	16KHz ~ 48KHz	80kbps~320kbps
*.wma	Wave_Format_MSAudio1	16KHz ~ 48KHz	56kbps~128kbps
	Wave_Format_MSAudio2	16KHz ~ 48KHz	56kbps~128kbps
*.aac	AAC	16KHz ~ 96KHz	48kbps~320kbps
	AAC-LC	16KHz ~ 96KHz	128kbps~192kbps 5.1ch 320kbps
	HE-AAC	24KHz ~ 96KHz	48kbps~64kbps 5.1ch 160kbps
*.wav	-	16KHz ~ 48KHz	up to 3000kbps
*.ogg	OGG 1.1.0	16KHz ~ 48KHz	50kbps~500kbps
*.flac	FLAC 1.1.0, FLAC 1.2.1	16KHz ~ 96KHz	up to 3000kbps



- If there are too many folders and files stored in the USB device, reading may take some time.

INPUT MODE

 Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the mode you want.

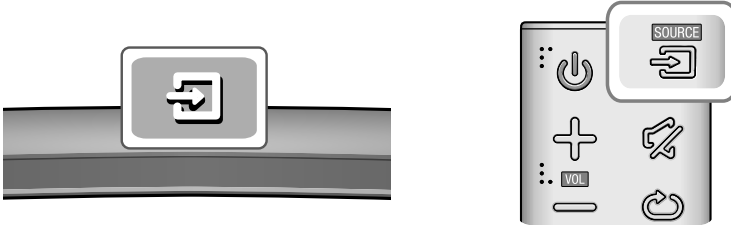

Input mode	Display
Optical Digital input ARC (HDMI OUT) input	D.IN
AUX input	AUX
HDMI input	HDMI
BLUETOOTH mode	BT
TV SoundConnect	TV
USB mode	USB

The unit turns off automatically in the following situations.

- D.IN / HDMI / BT / TV / USB / ARC Mode

- If there is no audio signal for 25 minutes.

- AUX Mode

To turn the Auto Power Down function ON or OFF, press and hold the  button for 5 seconds.

ON - AUTO POWER DOWN / OFF - AUTO POWER DOWN appears on the display.

 
- If the AUX cable is disconnected for 25 minutes.
- If there is no KEY input for 8 hours when the AUX cable is connected.

 
BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

TO CONNECT THE SOUNDBAR TO A BLUETOOTH DEVICE

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

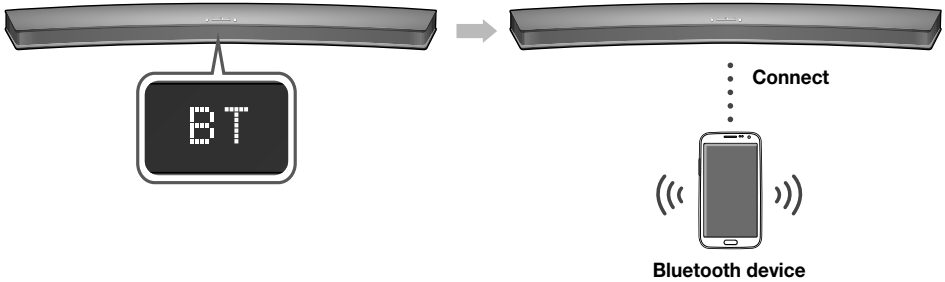

1. Press the  (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
 - You will see **BT READY** on the front display of the Soundbar.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select "**[Samsung] Soundbar J-Series**" from the list.
 - When the Soundbar is connected to the Bluetooth device, it will display **[Bluetooth device name] → BT** on the front display.
 - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
 - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "**[Samsung] Soundbar J-Series**" found by the Bluetooth device and have it search for the Soundbar again.
4. Play music on the connected device.
 - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
 - In **BT** mode, the Play / Pause / Next / Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.



- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
 - If there is a strong electrical field around the Soundbar.
 - If several Bluetooth devices are simultaneously paired with the Soundbar.
 - If the Bluetooth device is turned off, not in place, or malfunctions.
 - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.
- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- Once you have paired the Soundbar to a Bluetooth device, selecting "[Samsung] Soundbar J-Series" from the device's scanned devices list will automatically change the Soundbar to **BT** mode.
- Available only if the Soundbar is listed among the Bluetooth device's paired devices. (The Bluetooth device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Bluetooth device's searched devices list only when the Soundbar is displaying **BT READY**.
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Bluetooth device.

BLUETOOTH POWER ON (BLUETOOTH POWER)

When the Bluetooth POWER On function is on and the Soundbar is turned off, if a previously paired Bluetooth device tries to pair with the Soundbar, the Soundbar turns on automatically.


1. Press the **Bluetooth POWER** on the remote while the Soundbar is turned on.
2. **ON - BLUETOOTH POWER** appears on the Soundbar's display.

TO DISCONNECT THE BLUETOOTH DEVICE FROM THE SOUNDBAR

You can disconnect the Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

TO DISCONNECT THE SOUNDBAR FROM THE BLUETOOTH DEVICE

Press the **SOURCE** button on the remote control or the  (Source) button on the product's top panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)



- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 10 meters.
- The Soundbar automatically turns off after 25 minutes in the Ready state.

► More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
 - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
 - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
 - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.
- This wireless device may cause electric interference during its operation.

USING SAMSUNG AUDIO REMOTE APP

► Install Samsung Audio Remote App

 
To control the product with your Smart Device and the Samsung Audio Remote app, download the Samsung Audio Remote App through Google Play store.

Market search : Samsung Audio Remote




► Accessing the Samsung Audio Remote App

After you install the Samsung Audio Remote app, follow the instructions in the app.

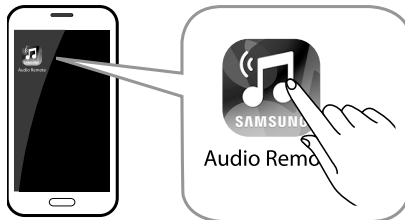

- The APP function only supports mobile phone Android devices running Android OS 3.0 or later.

 SOFTWARE UPDATE

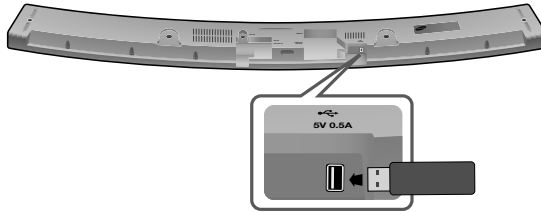

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading updates files.



- Insert a USB device containing the firmware update into the USB port on the main unit.
- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.
- After the update, all settings are reset to their factory default settings. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets the subwoofer connection too.


 
If connection to the subwoofer is not re-established automatically after the update, refer to page 15.

If the firmware fails to update, we recommend formatting the USB device in FAT16 and trying again.

- Once the software update is completed, turn off the product and then press and hold the (▶||) button on the remote control for more than 5 seconds. "INIT" appears on the display and the unit is powered off. The upgrade is complete.
- Do not format the USB device in the NTFS format. The Soundbar does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

TROUBLESHOOTING

Before requesting service, please check the following.

The unit will not turn on.	
• Is the power cord plugged into the outlet?	→ Connect the power plug to the outlet.
A function does not work when the button is pressed.	
• Is there static electricity in the air?	→ Disconnect the power plug and connect it again.
Sound is not produced.	
• Is the Mute function on?	→ Press the  (Mute) button to cancel the function.
• Is the volume set to minimum?	→ Adjust the Volume.
The remote control does not work.	
• Are the batteries drained?	→ Replace with new batteries.
• Is the distance between the remote control and main unit too far?	→ Move closer to the unit.
The TV SoundConnect (TV pairing) failed.	
• Does your TV support TV SoundConnect?	→ TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect.
• Is your TV firmware the latest version?	→ Update your TV with the latest firmware.
• Does an error occur when connecting?	→ Contact the Samsung call centre.
• Reset the TV mode and connect again.	→ Press and hold the  button for 5 seconds to reset the TV SoundConnect connection.
The red LED on the subwoofer blinks and the subwoofer is not producing sound.	
• Your subwoofer may not be connected to the main body of the product.	→ Try to connect your subwoofer again. (See Page 15)
The subwoofer drones and vibrates noticeably.	
• Try to adjust the vibration of your subwoofer.	→ Press the WOOFER button on your remote control to adjust its value (between -12, -6 to +6.).

SPECIFICATIONS

Model name	HW-J6001		
GENERAL	USB		5V / 0.5A
	Weight	Main Unit	2.7 kg
		Subwoofer (PS-WJ6001)	6.8 kg
	Dimensions (W x H x D)	Main Unit	1078 x 47.5 x 129 mm
		Subwoofer (PS-WJ6001)	452 x 335 x 154 mm
	Operating Temperature Range		+5°C to +35°C
	Operating Humidity Range		10 % to 75 %
AMPLIFIER	Rated Output Power	Main Unit	22W/CH x 6, 4ohm, THD=10%, 1KHz
		Subwoofer (PS-WJ6001)	168W, 3ohm, THD=10%, 100Hz
	S/N Ratio (Analogue Input)		65 dB
	Separation (1kHz)		65 dB

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

※ **Open Source Licence Notice**

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

SAMSUNG

HW-J6001

使用說明書

Curved Soundbar

無窮想像，無限可能

感謝您購買此款三星產品。

欲享受更加全面的服務，請到以下網站註冊您的產品

www.samsung.com/register

特性

Samsung Remote App

借助 Samsung Audio Remote App*，可輕鬆控制 Soundbar。此應用程式是一個方便使用的控制樞紐，可對電源、音量、媒體控件和自訂設定 (例如均衡器設定) 進行基本控制。

環繞聲擴展

環繞聲擴展 功能增強了聆聽體驗的深度和廣度。

TV SoundConnect

借助 TV SoundConnect，可使用藍牙連接電視與 Soundbar。Soundbar 與電視之間沒有了接線需要，這樣既可以突出這些系統的纖薄時尚設計，又可以讓居住環境保持整潔。Soundbar 和電視只需用一個電視遙控器即可輕鬆控制。

HDMI

HDMI 可同時傳輸影音訊號，並提供清晰的圖像。本設備還配備有 ARC 功能，可讓您以 HDMI 纜線透過 Soundbar 聆聽來自電視機的聲音。此功能僅在您將本設備連接至符合 ARC 標準電視機時可用。

USB Host 支援

您可以使用 Soundbar 的 USB HOST 功能連接外部 USB 儲存裝置 (例如 MP3 播放器，USB 快閃記憶體等) 並播放其中的音樂檔案。

藍牙功能

您可以使用藍牙裝置連線到 Soundbar 並欣賞高品質立體聲音樂，所有一切皆無需連線！

授權



根據 Dolby Laboratories 的許可證製造。Dolby 和雙 D 標誌是 Dolby Laboratories 的商標。



如需 DTS 專利，請造訪 <http://patents.dts.com>。根據 DTS Licensing Limited 的許可證製造。DTS，該標誌 & DTS 和該標誌一起均為 DTS，Inc. 的註冊商標，而 DTS 2.0 Channel 是 DTS，Inc. 的商標。© DTS，Inc. 版權所有。

HDMI





詞語 HDMI 和 HDMI High-Definition Multimedia Interface 以及 HDMI 標誌是 HDMI Licensing LLC 在美國以及其他國家/地區的商標或註冊商標。

安全資訊

安全警告

為防止電擊，請勿拆卸蓋板(或背板)。

本機內部無使用者可以自行維修的零件。如需維修，請由專門的服務人員進行維修。

	<p>注意 為防止電擊， 請勿打開</p>			這個符號表示本產品內部帶有足以造成電擊或人身傷害的「危險電壓」。
				這個符號表示本產品隨附的重要說明。

警告：請勿將本機暴露在雨中或潮濕場所，以免火災或電擊。

 
注意：為防止電擊，請將寬片插頭完全插入匹配的寬插槽。

- 本設備應始終連接到帶有保護地線連接的交流電插座。
- 設備與電源斷開連接時，必須將插頭從電源插座上拔出，因此電源插頭應隨時保持便於操作。


注意

- 請勿將水滴落或噴灑在設備上，不得在設備上放置裝有液體的物品，如花瓶。
- 要完全關閉本設備，須將電源插頭從牆上電源插座拔出。因此，電源插頭應隨時保持便於操作。


注意事項

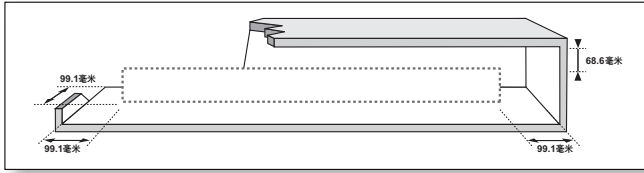

 
請確保您家中的交流電源符合產品背面標示貼紙上的要求。請將產品安裝在水平，適當的基座(家具)上，並在周邊留下足夠的通風空間 7~10 公分。確保通風孔未被堵塞。請勿將本設備放在放大器或其他會發熱的設備上。本設備可供連續使用。要完全斷開設備的電源連接，請從牆上電源插座上拔掉交流電插頭。如果長時間不使用設備，請拔下其電源插頭。

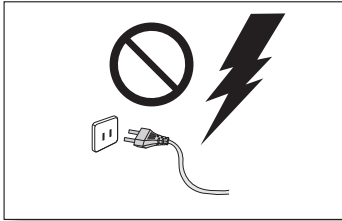


在雷雨天氣時，請從牆上電源插座拔下交流電插頭。閃電造成的電壓峰值會損壞本設備。

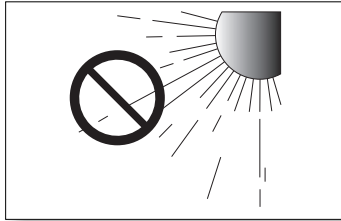 

 請勿將本設備直接在陽光下曝曬或暴露於其他熱源下。這可能導致本設備過熱而發生故障。

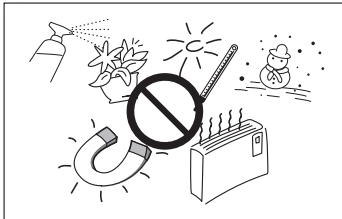

 本產品應避免接觸潮濕(如花瓶)以及過熱(如壁爐)或者會產生強磁或電場的設備。如果設備發生故障，請從交流電源拔下電源線。本產品並非供工業使用，而是僅供個人使用。如果本產品存放在低溫環境中，則可能會出現冷凝現象。如果在冬天將本設備運送到室內，則需要等待大約 2 小時的時間，以便本機在使用前達到室內溫度。

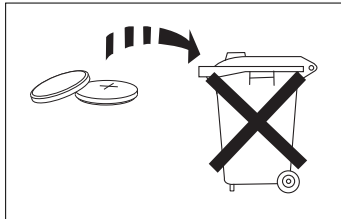

本產品使用的電池含有對環境有害的化學物質。請勿將電池作為普通生活垃圾棄置。請勿將電池置於火中。請勿使電池短路，分解或過熱。如果沒有正確替換電池，可能會導致危險。僅可使用同樣或相同類別的電池替換。



警告，請勿吞食電池，會造成化學灼傷危險

[遙控器隨附] 本產品包含鈕扣電池。

如果誤吞食鈕扣電池，則可能會在 2 小時內導致嚴重的內部器官灼傷，並且能會導致死亡。請將新電池和用過的電池放置在兒童不能觸及的地方。如果電池盒隔室不能嚴密關閉，請停止使用該產品並將其放置在兒童不能觸及的地方。如果您認為不慎吞食了電池或將電池置於體內部某個部位，請立即就醫。

目錄

2 使用入門

- 2 特性
- 3 安全資訊
- 6 包裝附帶內容

7 描述

- 7 頂端面板/前面板
- 8 後面板/底部面板
- 9 遙控器

11 安裝

11 安裝 Soundbar

- 11 安裝壁裝支架
- 14 將 Soundbar 安裝到電視底座上
- 14 獨立安裝 Soundbar

15 連接

15 連接低音炮

17 連接至電視

- 17 使用 HDMI (數碼) 電纜連接電視
- 17 使用光纖 (數碼) 電纜連接電視
- 18 TV SoundConnect

20 與外部裝置的連接

- 20 HDMI 纜線
- 20 光纖或 AUX 纜線
- 21 USB

23 功能

- 23 輸入模式
- 24 藍牙
- 27 軟件更新

28 故障排除

- 28 故障排除

29 附錄

- 29 規格



本使用說明書中的圖片和圖解僅供參考，可能與實際的產品外觀有所不同。

包裝附帶內容


閱讀使用說明書之前注意事項

閱讀使用說明書之前，請注意下列術語。

► 本說明書中使用的圖示


圖示	術語	定義
	注意	表示功能不起作用或設定可能已取消的情況。
	注	表示頁面上有協助功能操作的提示或說明。

 請檢查是否提供下面所示的附件。

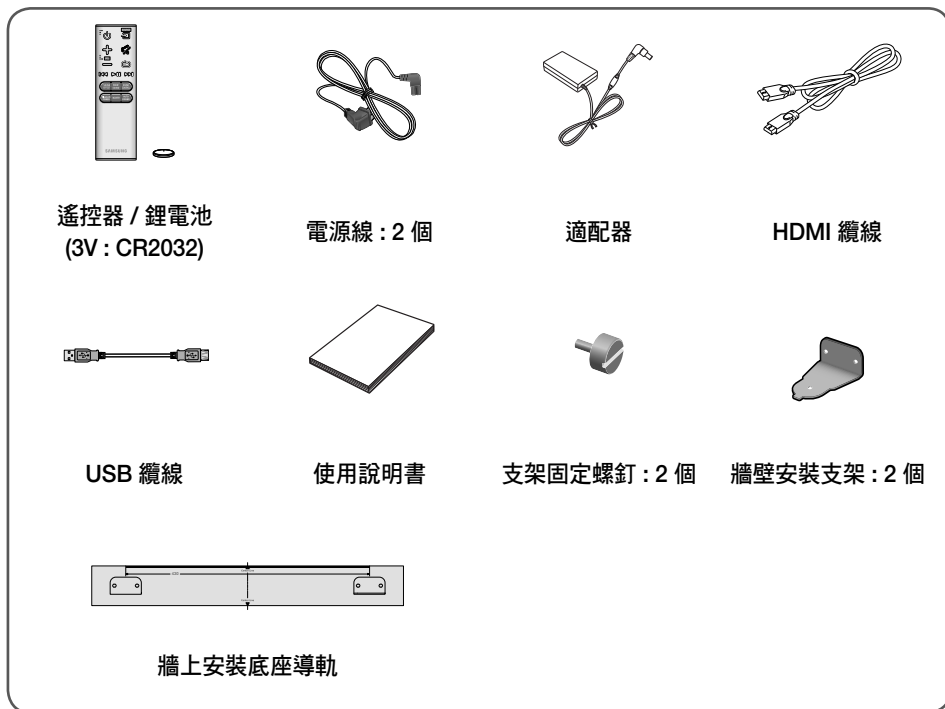


- 附件的外觀可能與上述圖例略有不同。
- 請使用專用的 USB 纜線將外部 USB 裝置連接至本設備。

 頂端面板/前面板

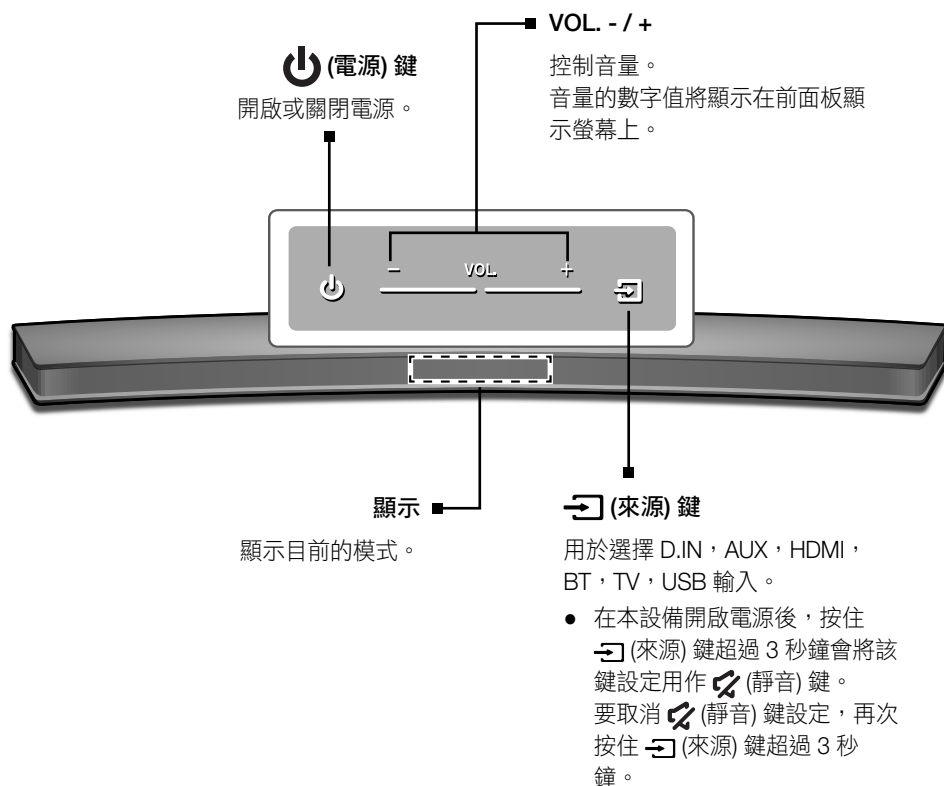

- 當您插入交流電源線時，電源鍵將在 4 到 6 秒鐘內生效。
- 開啟本設備時，等待 4 至 5 秒鐘後才會發出聲音。
- 如果希望僅欣賞來自 Soundbar 的聲音，必須在電視機的 Audio Setup (音訊設定) 功能表中關閉電視機的音箱。請參閱電視機隨附的使用說明書。

 後面板/底部面板

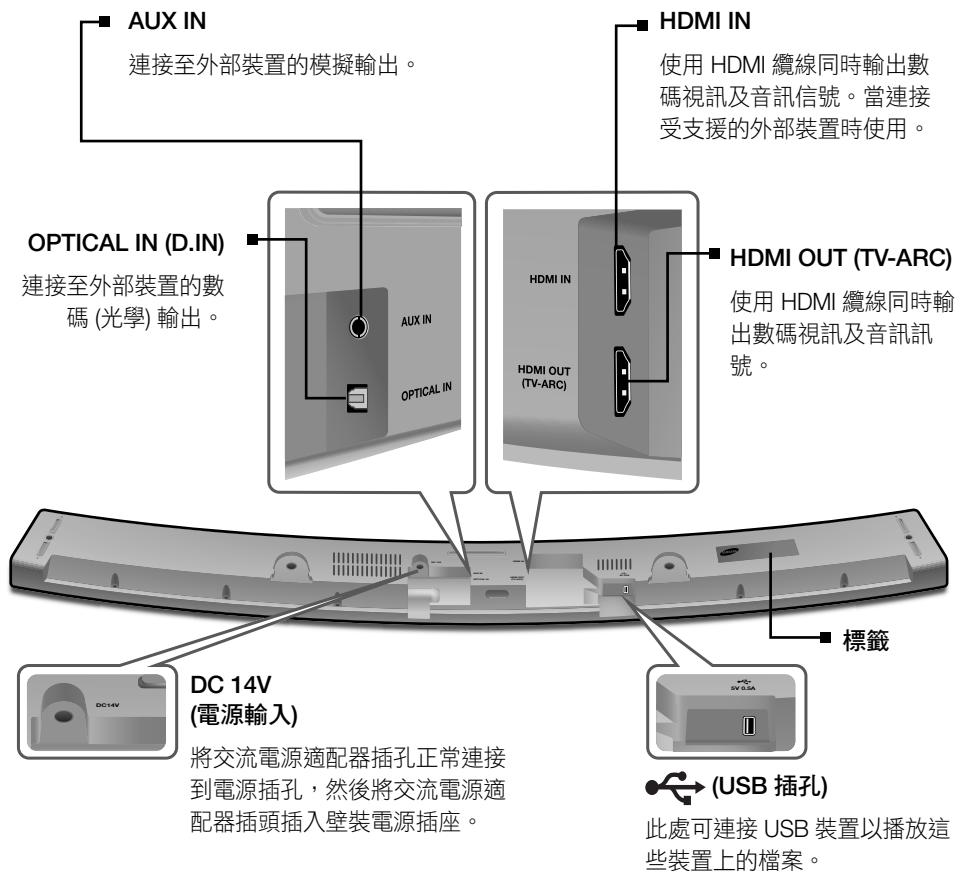


- 從壁裝電源插座斷開交流電源適配器的電源線時，請拔出插頭。切勿拉扯電源線。
- 在組件之間的連接完成之前，切勿將本設備或其他組件連接到交流電源插座。

遙控器



 - Soundbar 是三星的專利名稱。
- 使用電視機的遙控器操控電視機。

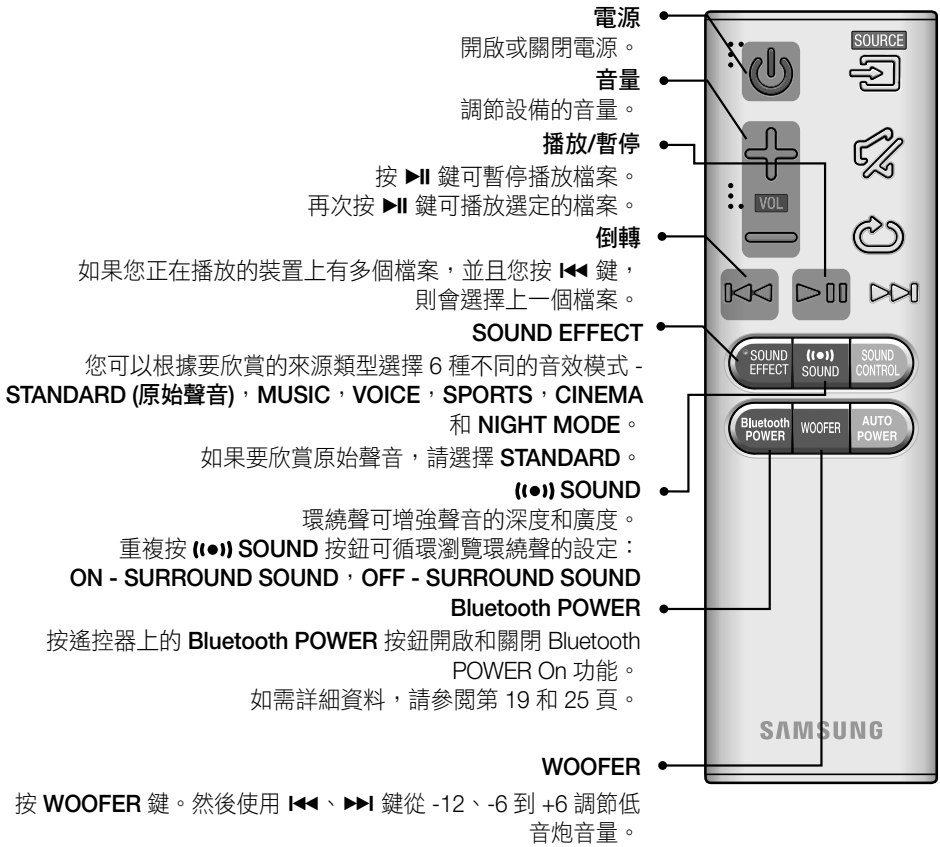

在遙控器中裝上電池

1. 使用適用的錢幣逆時針轉動遙控器電池蓋以將其取下，如上圖中所示。
2. 使用適用的錢幣順時針轉動遙控器電池蓋，直到它固定到位為止。

 
裝入一節 3V 電池。裝入電池時，讓正 (+) 極朝上。蓋上電池蓋，對齊 '●' 標誌，如上圖中所示。

安裝 SOUNDBAR

安裝壁裝支架


► 安裝注意事項

- 只能安裝在垂直的牆壁上。
- 安裝時，請避開溫度或濕度高的位置，還要避開不能承受裝置重量的牆壁。
- 檢查牆壁的承受力。如果牆壁承受力不足以支撐本設備，請加固牆壁或在能夠支撐本設備重量的其他牆壁上安裝。
- 購買並使用適合您的牆壁類型 (灰泥板、鐵板、木板等) 的固定螺絲或錨釘。若有可能，請將支撐螺絲釘入牆柱中。
- 根據您要安裝 Soundbar 之牆壁的類型及厚度，購買適用的牆壁安裝用螺釘。
 - 直徑：M5
 - 長度：建議 L 35 毫米或更長
- 在安裝到牆壁上之前，將纜線從設備連接至外部裝置。
- 在安裝之前，確保關閉設備電源並拔下電源插頭。否則可能導致電擊。

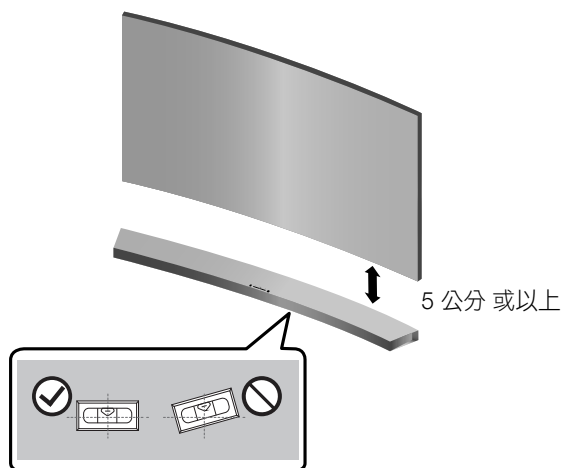


1. 對著牆壁表面放置安裝導軌。

 
- 安裝導軌必須放水平。
- 如果電視安裝在牆壁上，則將 Soundbar 安裝在電視下方至少 5 公分以外處。

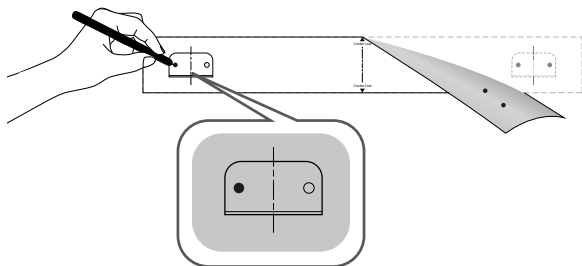

 
2. 用筆畫出要在牆壁上打螺絲位置，然後取下安裝導軌。接著，使用大小適中的鑽頭鑽螺釘孔。

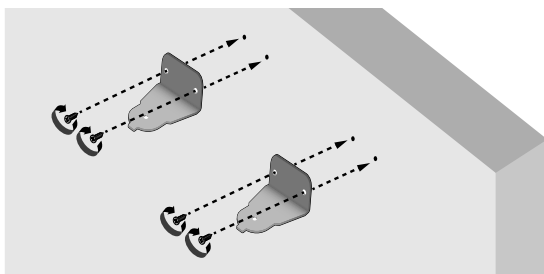

 3. 用螺絲將牆壁安裝支架 (2 個) 固定到標出的位置。

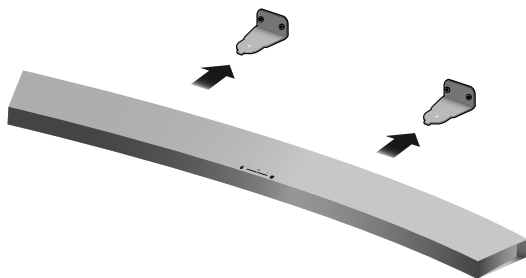

 4. 插入牆壁安裝支架後，對齊產品，如圖中所示。

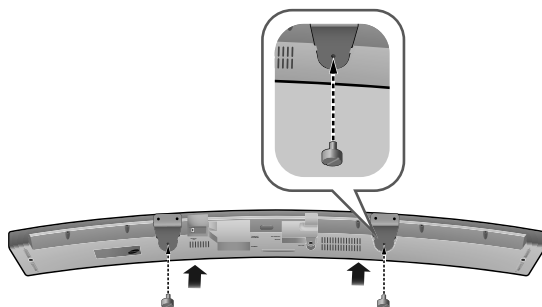

5. 將**支架固定螺釘**插入產品底面的每個孔中並擰緊。產品便已固定到**牆壁安裝支架**上。



 
- 不要在安裝好的裝置上掛東西，也不要敲擊裝置或讓它掉到地上。
- 將裝置穩穩地固定在牆壁上，使它不會掉下來。如果裝置掉到地上，可能會傷人或損壞產品。
- 設備安裝到牆上之後，請確保兒童不會拉扯任何連接纜線，以免設備掉落。
- 為了讓牆壁安裝取得最佳效能，如果電視機也是安裝在牆壁上，請將音箱系統安裝在電視機下 5 公分 以外的位置。
- 為了安全起見，如果不將裝置安裝在牆壁上，請將裝置安裝在穩固、平坦的表面上，使它不容易掉到地上。

將 SOUNDBAR 安裝到電視底座上

如果您擁有的 Samsung 電視帶有與此 Soundbar 相容的底座，則可以將 Soundbar 安裝到電視底座上。



- 此 Soundbar 與下列電視型號相容：JU6700、JU6500 及 JU7500 - 48 英吋、55 英吋和 65 英吋；JU6610 - 48 英吋和 55 英吋；以及 2015 Samsung curved 電視。請造訪 Samsung Electronics 的首頁 (www.Samsung.com)，以查看相容型號的詳細清單。
- 此 Soundbar 不能裝入到不相容的電視中，無論是電視底座還是電視支架形狀均如此。

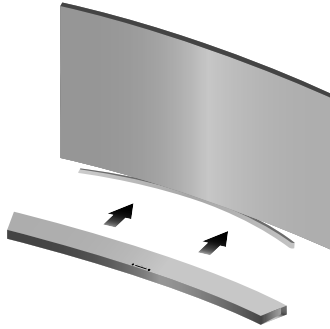

1. 使 Soundbar 的中心與電視底座中心對齊，然後細心地將它推到盡頭，如圖中所示。請務必細心，否則電視會不平衡。

獨立安裝 SOUNDBAR



1. 放置在電視前面平坦區域的中央。



- 將它安裝在平整硬實的表面上。



- 在組件之間的所有連接完成之前，切勿將本產品或電視機連接到牆上插座。
- 在移動或安裝本產品之前，請確定關閉電源並拔下電源線。

連接低音炮

 
自動連接到低音炮


主裝置與低音炮均開機後，主裝置與低音炮應可自動連結（無線連接）。

- 如果已徹底連接，低音炮中的藍色 LED 會停止閃爍。

手動連接到低音炮

低音炮的連結 ID 在出廠時已預設，在開啟主裝置與低音炮時，它們應會自動連結（無線連接）。如果在開啟主裝置和低音炮時，Link 指示燈未亮起，請按照下面的步驟操作設定 ID。

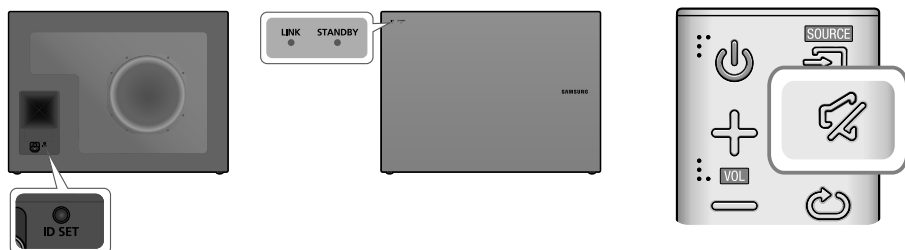

1. 將主機與重低音音箱的電源線插入牆上交流電源插座。
2. 使用尖頭小物件按住重低音音箱背面的 **ID SET** 鍵 5 秒鐘。
 - STANDBY 指示燈將會熄滅，而 LINK 指示燈（藍色 LED）將會快速閃爍。
3. 在主裝置已關機（處於 STANDBY 模式）的情況下，按住遙控器上的 （靜音）5 秒鐘。
4. ID SET 訊息會出現在 Soundbar 的顯示螢幕上。
5. 若要完成連結，請在低音炮的藍色 LED 閃爍時，開啟主裝置的電源。
 - 現在，主裝置和低音炮應已連結（連接）。
 - 低音炮上的 Link 指示燈（藍色 LED）應該會長亮。
 - 如果 LINK 指示燈不是藍色長亮，即表示連結過程失敗。關閉主裝置，並從步驟 2 開始再試一次。
 - 您可以選擇音效以從無線重低音音箱欣賞更好的聲音效果。（請參閱第 10 頁）



 
- 在移動或安裝本產品之前，請確定關閉電源並拔下電源線。
- 如果關閉主裝置，無線低音炮將處於待機模式，並且上方的 STANDBY LED 會在 Link 指示燈 (藍色 LED) 閃爍 30 秒鐘後亮起。
- 如果您在 Soundbar 附近使用某個裝置，其使用的頻率與 Soundbar 所用的頻率相同 (均為 2.4GHz)，則干擾可能會導致聲音中斷。
- 主裝置與低音炮之間的無線信號發射距離約為 10 公尺，此數值會因您的操作環境而異。如果主機和無線重低音音箱之間有鋼筋混凝土牆壁或金屬牆壁，則無線訊號無法穿透金屬，因此系統可能根本無法進行作業。
- 如果主設備無法建立無線連線，請按照上一頁中的步驟 1-5 操作，重設主設備與無線低音炮之間的連線。

 


- 無線低音炮中內置了無線接收天線。請使本設備遠離水源和潮濕的地方。
- 為獲得最佳收聽效果，請確保無線重低音音箱周圍沒有任何障礙物。

連接至電視

使用 HDMI (數碼) 電纜連接電視

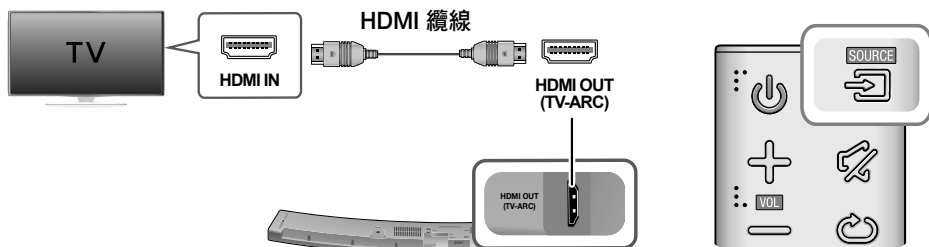



1. 將 HDMI 纜線 從產品背面的 **HDMI OUT (TV-ARC)** 插孔連接到電視機的 HDMI IN 插孔。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **D.IN** 模式。



- HDMI 是一個介面，它允許只需使用單一連接器即可進行視訊及音訊資料的數碼傳輸。
- 如果電視提供 ARC 連接埠，請將 HDMI 電纜連接到 HDMI IN (ARC) 連接埠。
- 如果使用有芯 HDMI 電纜，其直徑須在 14 以下。
- 必須開啟 Anynet+。
- 如果 HDMI 纜線不支援 ARC，就不能使用此功能。

  使用光纖 (數碼) 電纜連接電視

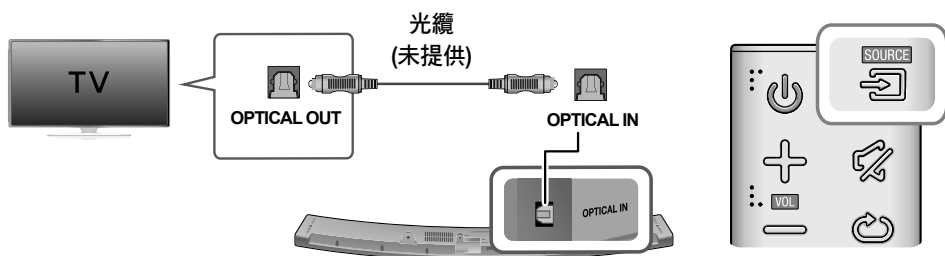


1. 將 Soundbar 上的 **OPTICAL IN** (音頻) 連接到電視的 OPTICAL OUT 插孔。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **D.IN** 模式。

► Auto Power Link

如果使用數碼光線將主設備連接至電視機，請將 Auto Power(自動電源) 功能設為 打開，以讓 Soundbar 在您開啟電視機時自動開啟。

AUTO POWER LINK	顯示
打開	OFF - ANYNET+ / ON - POWER LINK
關閉	ON - ANYNET+ / OFF - POWER LINK

 
1. 使用光纖連接 Soundbar 和電視。(未隨附)
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **D.IN** 模式。
3. 按遙控器上的 **AUTO POWER** 以開啟/關閉 Auto Power Link 功能。




- 根據連接的裝置，Auto Power Link 可能無法正常工作。

TV SOUNDCONNECT

  您可以透過連接至支援電視聲音連接功能之三星電視機的 Soundbar 欣賞電視機的聲音。

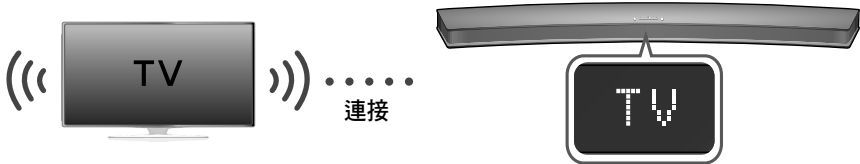

1. 開啟電視機和 Soundbar。
 - 開啟電視的功能表。
 - 移至「聲音」標籤上的「揚聲器設定」。
 - 將「新增裝置」功能表設定為「開啟」。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **TV** 模式。
3. 在電視上，將會顯示一則訊息，詢問您是否要啟用 TV SoundConnect 功能。
4. 使用電視機的遙控器選取 **<是>** 以完成連接電視機與 Soundbar。



- 將 Soundbar 的模式從電視切換為其他模式會自動終止 TV SoundConnect。
- 若要將 Soundbar 連接至其他電視機，必須終止現有連線。
- 終止與現有電視機的連線，然後按遙控器上的 ►|| 鍵 5 秒鐘以連接至另一台電視機。



- 自從 2012 年起發行的一些三星電視機支援電視聲音連接 (SoundShare) 功能。在開始之前，請檢查您的電視機是否支援電視聲音連接 (SoundShare) 功能。(如需詳細資訊，請參閱電視機的使用說明書。)
- 如果您的三星電視機是 2014 年之前發行的，請檢查 SoundShare 設定功能表。
- 如果電視機與 Soundbar 之間的距離超過 10 公尺，連線可能會不穩定或音訊可能會斷斷續續。如果出現這種情況，請重新安放電視機或 Soundbar，使得它們之間的距離在可操作範圍內，然後重新建立 TV SoundConnect 連線。
- 電視聲音連接工作範圍：
 - 建議的配對範圍：2 公尺 以內
 - 建議的操作範圍：10 公尺 以內
- Soundbar 上或 Soundbar 遙控器上的播放/暫停，下一首和上一首按鈕無法控制電視。

► 使用藍牙開啟電源功能

僅當使用 Bluetooth POWER On 將 Soundbar 連接至藍牙相容電視機之後，Bluetooth POWER On 功能才可用。開啟 Bluetooth POWER On 功能時，開啟或關閉連接的電視機還會開啟或關閉 Soundbar 的電源。

1. 使用 TV SoundConnect 功能將電視機連接至 Soundbar。
2. 按下 Soundbar 遙控器上的 **Bluetooth POWER** 鍵。**ON - BLUETOOTH POWER** 會出現在 Soundbar 的顯示螢幕上。
 - **ON - BLUETOOTH POWER**：Soundbar 會在您開啟或關閉電視機時開啟或關閉。
 - **OFF - BLUETOOTH POWER**：Soundbar 僅在您關閉電視機時關閉。



 
- 只有在 2013 年起發行的一些三星電視機支援此功能。

 
與外部裝置的連接

HDMI 纜線

HDMI 是標準的數碼介面，用於連接電視機，投影機，DVD 播放機，Blu-ray 播放機，機頂盒等裝置。


因為 HDMI 可以傳送最高品質的數碼信號，所以您可以欣賞到優質視訊和音訊 – 與在數碼來源中最初製作它時的品質一般無二。

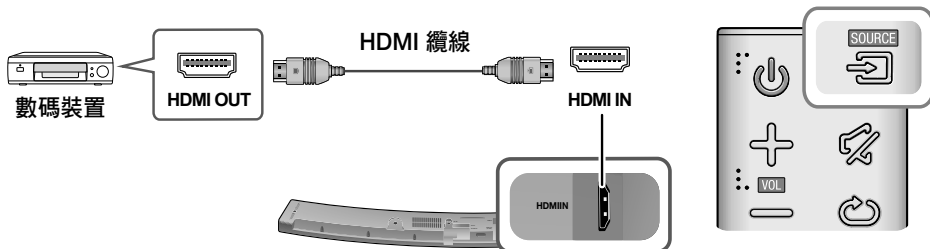


1. 將 HDMI 纜線 從產品背面的 **HDMI IN** 插孔連接到數碼裝置的 HDMI OUT 插孔。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **HDMI** 模式。

光纖或 AUX 纜線

 
本裝置配有一個光學輸入數碼插孔和一個音頻模擬輸入插孔，可讓您以兩種方式將它連接至外部裝置。

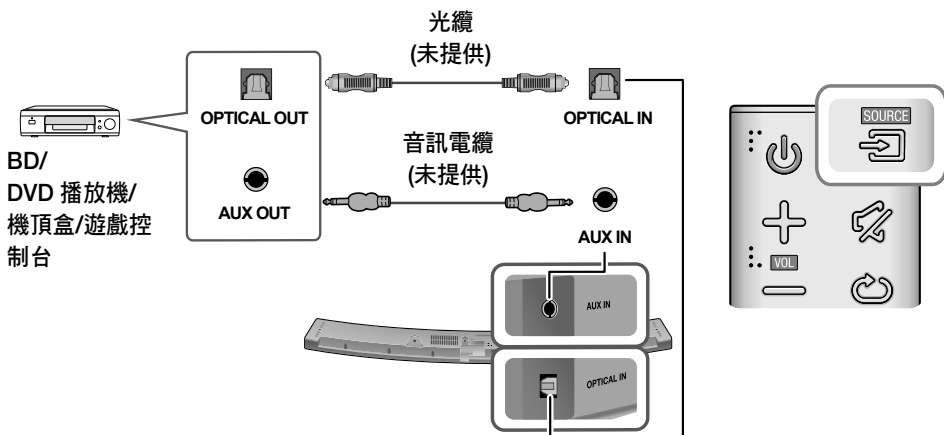

▶ AUX 纜線

 
1. 將主裝置上的 **AUX IN** (音頻) 連接至來源裝置的 **AUDIO OUT** 插孔。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **AUX** 模式。

 
▶ 光纜

1. 將主裝置上的 **OPTICAL IN** (音頻) 連接至來源裝置的 **OPTICAL OUT** 插孔。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **D.IN** 模式。

USB

  您可以透過 Soundbar 播放位於 USB 儲存裝置上的音樂檔案。

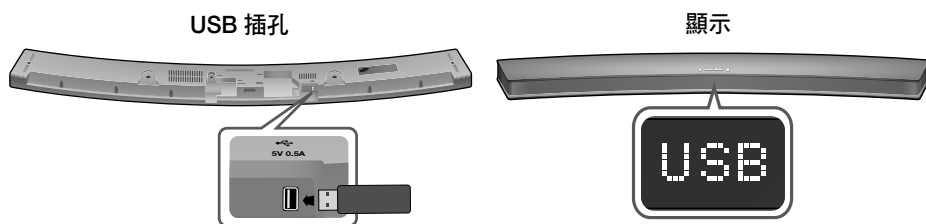

1. 將 USB 裝置連接到產品的 USB 接口。
2. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **USB** 模式。
3. **USB** 出現在顯示螢幕上。
 - Soundbar 與 USB 裝置之間的連線已完成。
 - 如果超過 25 分鐘未連接 USB 裝置，Soundbar 會自動關閉 (自動關閉電源)。

▶ 在連接 USB 裝置之前

了解如下資訊：

- 如果 USB 裝置上資料夾的檔案名稱超過 10 個字元，它不會顯示在 Soundbar's 的顯示螢幕上。
- 本產品可能與某些類型的 USB 儲存媒體不相容。
- Soundbar 支援 FAT16 和 FAT32 檔案系統。
 - 不支援 NTFS 檔案系統。
- 將 USB 裝置直接連接到產品的 USB 插孔。否則可能會遇到 USB 相容性問題。
- 切勿透過多卡閱讀器將多個儲存裝置連接至本產品，否則本產品可能無法正確運作。

連接


- 不支援數碼相機 PTP 通訊協定。
- 不要移除正在傳輸檔案的 USB 裝置。
- 商業網站中受 DRM 保護的音樂檔案 (MP3, WMA) 無法播放。
- 不支援外部 HDD。
- 不支援手機裝置。
- 檔案格式類型相容性清單：


副檔名	編解碼器	取樣率	位元速率
*.mp3	MPEG 1 Layer2	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 1 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2 Layer3	16KHz ~ 48KHz	80kbps~320kbps
	MPEG 2.5 Layer3	16KHz ~ 48KHz	80kbps~320kbps
*.wma	Wave_Format_MSAudio1	16KHz ~ 48KHz	56kbps~128kbps
	Wave_Format_MSAudio2	16KHz ~ 48KHz	56kbps~128kbps
*.aac	AAC	16KHz ~ 96KHz	48kbps~320kbps
	AAC-LC	16KHz ~ 96KHz	128kbps~192kbps 5.1 聲道 320kbps
	HE-AAC	24KHz ~ 96KHz	48kbps~64kbps 5.1 聲道 160kbps
*.wav	-	16KHz ~ 48KHz	最高 3000kbps
*.ogg	OGG 1.1.0	16KHz ~ 48KHz	50kbps~500kbps
*.flac	FLAC 1.1.0, FLAC 1.2.1	16KHz ~ 96KHz	最高 3000kbps



- 如果儲存在 USB 裝置上的資料夾和檔案太多，讀取可能較為費時。

 輸入模式

 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵來選擇所需的模式。

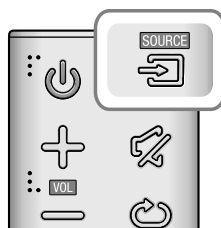

輸入模式	顯示
光學數碼輸入 ARC (HDMI OUT) 輸入	D.IN
AUX 輸入	AUX
HDMI 輸入	HDMI
BLUETOOTH 模式	BT
TV SoundConnect	TV
USB 模式	USB

本設備在下列情況下會自動關閉：

- D.IN/HDMI/BT/TV/USB/ARC 模式
 - 如果 25 分鐘沒有音訊訊號。
- AUX 模式

若要將 Auto Power Down 功能 設為 ON 或 OFF，請按住 **▶||** 鍵 5 秒鐘。

ON - AUTO POWER DOWN / OFF - AUTO POWER DOWN 將出現在顯示螢幕上。

 
- 如果 AUX 纜線中斷連接長達 25 分鐘。
- 如果 AUX 線纜連接後 8 小時內沒有按鍵輸入。

 
藍牙

您可以使用藍牙裝置連線到 Soundbar 並欣賞高品質立體聲音樂，所有一切皆無需連線！

將 SOUNDBAR 連接至藍牙裝置

檢查藍牙裝置是否支援符合藍牙的立體聲耳機功能。

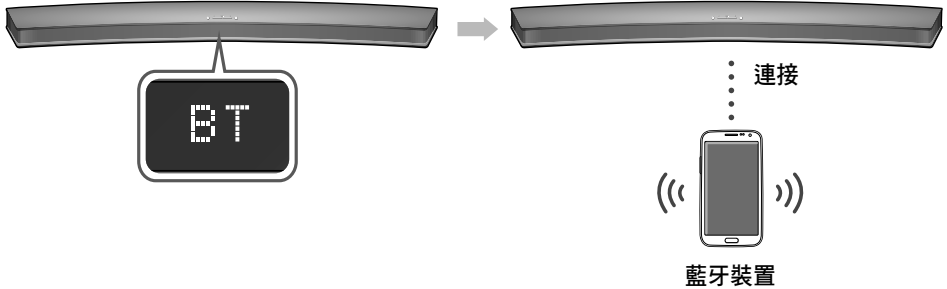

1. 按主裝置頂部面板上的  (來源) 鍵或遙控器上的 **SOURCE** 鍵選擇 **BT** 模式。
 - 您將在 Soundbar 的前顯示螢幕上看到 **BT READY**。
2. 在要連接的藍牙裝置上選擇藍牙功能表。(請參閱藍牙裝置的使用說明書。)
3. 從該清單中選擇 "**[Samsung] Soundbar J-Series**"。
 - 當將 Soundbar 連接至藍牙裝置時，其前面顯示螢幕會顯示 **[藍牙裝置名稱] → BT**。
 - 裝置名稱只能以英文顯示。如果名稱不是英文，將會顯示底線 "_"。
 - 如果藍牙裝置無法與 Soundbar 配對，請刪除之前被藍牙裝置找到的 "**[Samsung] Soundbar J-Series**"，讓其重新搜尋 Soundbar。
4. 在連接的裝置上播放音樂。
 - 您可以透過 Soundbar 聆聽在連接的藍牙裝置上播放的音樂。
 - 在 **BT** 模式下，播放/暫停/下一首/上一首 功能無法使用。不過，在支援 AVRCP 的藍牙裝置中，這些功能可以使用。



- 在連接藍牙裝置時，如果系統要求您提供 PIN 碼，請輸入 <0000>。
- 一次只能配對一個藍牙裝置。
- 關閉 Soundbar 時，藍牙連接將會終止。
- 在下列情況下，Soundbar 可能無法正確執行藍牙搜尋或連接：
 - 如果 Soundbar 周圍具有強電場。
 - 如果多個藍牙裝置同時與 Soundbar 配對。
 - 如果藍牙裝置已關閉，沒有就位或發生故障。
 - 請注意，如微波爐，無線 LAN 適配器，螢光燈和煤氣爐之類的裝置與藍牙裝置使用相同的頻率範圍，可能導致電子干擾。
- Soundbar 支援 SBC 資料 (44.1kHz, 48kHz)。
- 僅連接到支援 A2DP (AV) 功能的藍牙裝置。
- 您無法將 Soundbar 連接至僅支援 HF (免持) 功能的藍牙裝置。
- 使 Soundbar 與藍牙裝置配對後，如果從裝置的已掃描裝置清單中選取 "[Samsung] Soundbar J-Series"，則會自動將 Soundbar 變更為 BT 模式。
- 僅當 Soundbar 列出在藍牙裝置的搜尋到的裝置清單中時可用。(藍牙裝置和 Soundbar 先前至少必須已配對一次。)
- 僅當 Soundbar 正在顯示 BT READY 時，它才會出現在藍牙裝置的搜尋到的裝置清單中。
- 在 TV SoundConnect 模式下，無法將 Soundbar 與另一個藍牙裝置配對。

藍牙開啟電源功能 (BLUETOOTH POWER)

當 Bluetooth Power On(藍牙打開電源) 功能開啟且 Soundbar 關閉時，如果先前配對的藍牙裝置嘗試與 Soundbar 配對，則 Soundbar 會自動開啟。

 
1. 如果 Soundbar 開啟，請按遙控器上的 **Bluetooth POWER**。
2. **ON - BLUETOOTH POWER** 會出現在 Soundbar 的顯示螢幕上。

從 SOUNDBAR 中斷藍牙裝置

您可以從 Soundbar 中斷藍牙裝置。如需說明，請參閱藍牙裝置的使用說明書。

- Soundbar 將會中斷連接。
- Soundbar 與藍牙裝置中斷連接時，Soundbar 將會在前顯示螢幕上顯示 **BT DISCONNECTED**。

從藍牙裝置中斷 SOUNDBAR

按下遙控器上的 **SOURCE** 鍵或產品頂端 面板上的  (來源) 以從 BT 切換至另一種模式，或者關閉 Soundbar。

- 連接的藍牙裝置將會等待一定的時間，獲得 Soundbar 的回應後再終止連線。(中斷連接時間可能會視具體的藍牙裝置而不同)



- 在藍牙連接模式下，如果 Soundbar 與藍牙裝置之間的距離超出 10 公尺，藍牙連線將會中斷。
- Soundbar 會在處於 就緒 狀態 25 分鐘後自動關閉。

► 有關藍牙的更多資訊

藍牙是一種技術，可使藍牙相容裝置透過短波無線連接輕鬆地彼此互連。

- 根據使用情況下，藍牙裝置在下列條件下可能會導致躁聲或故障：
 - 當身體的一部分接觸到藍牙裝置或 Soundbar 的接收/傳輸系統時。
 - 由於牆壁，角落或辦公分區的障礙物導致的電子差異。
 - 由相同頻帶裝置 (包括醫療設備，微波爐和無線 LAN) 引起的電子干擾。
- 將 Soundbar 和藍牙裝置保持較近的距離以配對。
- Soundbar 與藍牙裝置之間的距離越遠，訊號品質就越差。如果距離超出藍牙作業範圍，連線便會中斷。
- 在接收敏感性較差的區域，藍牙連線可能無法正常工作。
- 藍牙連線僅在其靠近設備時有效。如果藍牙裝置超出範圍，連線將會自動中斷。即使在範圍內，聲音品質也可能會由於障礙物 (如牆壁或門) 而下降。
- 此無線裝置在其作業期間可能會導致電子干擾。

使用 SAMSUNG AUDIO REMOTE 應用程式

► 安裝 Samsung Audio Remote 應用程式

 
若要使用智能裝置和 Samsung Audio Remote 應用程式來控制產品，請從 Google Play 商店下載 Samsung Audio Remote 應用程式。

Market 搜尋 : Samsung Audio Remote




► 存取 Samsung Audio Remote 應用程式

安裝 Samsung Audio Remote 應用程式之後，按照應用程式中的說明操作。

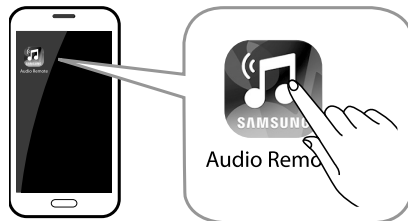

- 應用程式功能僅支援執行 Android OS 3.0 或更高版本的手機 Android 裝置。

 軟件更新

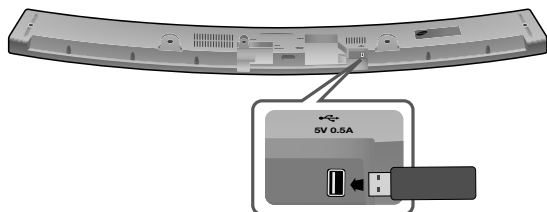

三星以後可能會提供 Soundbar 的系統固件更新。

有更新可用時，若要更新固件，請將儲存有固件更新的 USB 裝置連接至 Soundbar 上的 USB 接口。

請注意，如果有多個更新檔，必須將它們一個一個地載入到 USB 裝置上，然後逐一使用它們來更新固件。

請造訪 Samsung.com 或聯絡三星服務中心，以獲取關於下載更新檔案的更多資訊。



- 將含有韌體更新的 USB 設備插入主設備的 USB 接口。
- 如果 Soundbar 支援的音訊檔案儲存在 USB 儲存裝置上，則可能無法正確更新固件。
- 套用更新期間，不要斷開電源或取下 USB 裝置。主裝置將在完成固件更新後自動關閉。
- 更新後，會將所有設定重設為其出廠預設設定。建議記下您的設定，以便在更新之後輕鬆重設。請注意，更新固件還會重設低音炮的連線。如果在更新之後未能自動建立與低音炮的連線，請參閱第 15 頁。
如果固件更新失敗，建議以 FAT16 格式化 USB 裝置，然後重試。
- 一旦軟件更新完成，請關閉本產品，然後按住遙控器上的 (▶||) 鍵超過 5 秒鐘。"INIT" 會出現在顯示螢幕上，並且裝置會自動關閉。更新便已完成。
- 不要以 NTFS 格式來格式化 USB 磁碟機。Soundbar 不支援 NTFS 檔案系統。
- 根據製造商，某些 USB 裝置可能不受支援。

故障排除

在請求服務前，請檢查下列內容。

設備無法開啟電源。

- | | |
|---------------|-----------------|
| • 電源線是否已插入插座？ | → 將電源插頭連接至電源插座。 |
|---------------|-----------------|

按下按鍵時，相應的功能無法運作。

- | | |
|------------|------------------|
| • 空氣中有靜電嗎？ | → 拔下電源插頭，然後重新連接。 |
|------------|------------------|


不發出聲音。

- | | |
|--------------|--|
| • 靜音功能是否開啟？ | → 按下  (靜音) 鍵以取消此功能。 |
| • 音量是否設定為最小？ | → 調高音量。 |

遙控器不起作用。

- | | |
|---------------------|----------|
| • 電池是否用盡？ | → 更換新電池。 |
| • 遙控器與主設備之間的距離是否太遠？ | → 移近本設備。 |

 TV SoundConnect (電視機配對) 失敗。

- | | |
|-------------------|---|
| • 電視機支援電視聲音連接嗎？ | → 自從 2012 年起發行的一些三星電視機支援電視聲音連接功能。請檢查電視機是否支援電視聲音連接。 |
| • 電視機固件是最新版本嗎？ | → 以最新固件更新電視機。 |
| • 連接時有發生錯誤嗎？ | → 聯絡三星服務中心。 |
| • +重設 TV 模式並再次連接。 | → 按住  鍵 5 秒鐘以重設電視聲音連接連線。 |

低音炮上的紅色 LED 閃爍，並且低音炮不發出聲音。

- | | |
|------------------|-------------------------|
| • 低音炮可能未連接至產品主機。 | → 再次嘗試連接低音炮。(請參閱第 15 頁) |
|------------------|-------------------------|

低音炮發出嗡嗡聲且明顯震動。

- | | |
|---------------|---|
| • 嘗試調節低音炮的振動。 | → 按遙控器上的 WOOFER 按鈕即可調節低音炮的音量 (在 -12、-6 到 +6 之間)。 |
|---------------|---|

規格

型號名稱	HW-J6001		
一般	USB		5V / 0.5A
	重量	主機	2.7 千克
		重低音音箱 (PS-WJ6001)	6.8 千克
	尺寸 (寬 x 高 x 厚)	主機	1078 x 47.5 x 129 毫米
		重低音音箱 (PS-WJ6001)	452 x 335 x 154 毫米
	工作溫度範圍		+5 °C 到 +35 °C
工作濕度範圍		10 % 到 75 %	
放大器	額定輸出功率	主機	22W/CH x 6, 4ohm, THD=10%, 1KHz
		重低音音箱 (PS-WJ6001)	168W, 3ohm, THD=10%, 100Hz
	訊噪比 (模擬輸入)		65 dB
	分離度 (1kHz)		65 dB

* 訊噪比，失真度，分離度與可用靈敏度基於使用 AES (音訊工程學會) 指導原則的量測。

* 額定規格

- Samsung Electronics Co., Ltd 保留隨時變更規格的權利，恕不另行通知。
- 重量和尺寸為估計值。
- 電源和消耗功率，請參考本產品上的標籤。

※ 開源軟件許可聲明

- 要傳送關於開放來源的查詢與請求，請透過電子郵件 (oss.request@samsung.com) 聯絡三星。



©2015 Samsung Electronics Co.,Ltd. All rights reserved

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care Centre.

© 2015 Samsung Electronics Co., Ltd. 保留一切權利。

在全球範圍內聯絡三星

如果您有任何關於三星產品的問題或建議，請聯絡三星客戶服務中心。

Area	Contact Centre ☎	Web Site
▪ Asia Pacific		
CHINA	400-810-5858	www.samsung.com/cn/support
HONG KONG	(852) 3698 4698	www.samsung.com/hk/support (Chinese) www.samsung.com/hk_en/support (English)
MACAU	0800 333	www.samsung.com/support
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
AUSTRALIA	1300 362 603	www.samsung.com/au/support
NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
VIETNAM	1800 588 889	www.samsung.com/vn/support
THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
MYANMAR	+95-01-2399-888	www.samsung.com/support
MALAYSIA	1800-88-9999 603-77137477 (Overseas contact)	www.samsung.com/my/support
INDONESIA	021-56997777 08001128888	www.samsung.com/id/support
PHILIPPINES	1-800-10-7267864 [PLDT] 1-800-8-7267864 [Globe landline and Mobile] 02-4222111 [Other landline]	www.samsung.com/ph/support
TAIWAN	0800-329999	www.samsung.com/tw/support
JAPAN	0120-363-905	www.samsung.com/jp/support
INDIA	1800 3000 8282 - Toll Free 1800 266 8282 - Toll Free	www.samsung.com/in/support
BANGLADESH	9612300300	
SRI LANKA	94117540540	www.samsung.com/support



AH68-02833R-00



AH68-02833R-00