

# Operating and installation instructions

## SmartLine induction hob



To avoid the risk of accidents or damage to the appliance it is **essential** to read these instructions before it is installed and used for the first time.

# Contents

---

<b>Warning and Safety instructions</b> .....	4
<b>Caring for the environment</b> .....	13
<b>Guide to the appliance</b> .....	14
Hob.....	14
Controls / Indicators.....	15
Cooking zones.....	16
<b>Before using for the first time</b> .....	17
Cleaning the SmartLine element for the first time.....	17
Switching on the SmartLine element for the first time .....	17
<b>Induction</b> .....	18
How it works.....	18
Noises.....	19
Cookware .....	20
<b>Tips on saving energy</b> .....	21
<b>Setting range</b> .....	22
<b>Operation</b> .....	23
Using the appliance.....	23
Switching on the hob .....	24
Setting the power level.....	24
Switching off a cooking zone .....	24
Residual heat indicator.....	24
Power level setting - Extended setting range.....	25
PowerFlex area.....	25
Auto heat-up .....	26
Booster .....	27
Keeping warm .....	28
<b>Timer</b> .....	29
Minute minder .....	29
Switching off a cooking zone automatically .....	30
<b>Additional functions</b> .....	31
Stop & Go.....	31
Recall.....	31
Wipe protection .....	32
Demonstration mode.....	32
Displaying the SmartLine element data .....	32

<b>Safety features</b> .....	33
System lock / Safety lock.....	33
Safety switch-off .....	35
Overheating protection.....	36
<b>Programming</b> .....	37
<b>Cleaning and care</b> .....	40
<b>Problem solving guide</b> .....	42
<b>Optional accessories</b> .....	46
<b>Safety instructions for installation</b> .....	47
<b>Safety distances</b> .....	48
<b>Installation notes</b> .....	52
Onset installation.....	52
Installing several SmartLine elements.....	54
Combination with a downdraft extractor .....	54
<b>Building-in dimensions</b> .....	55
Onset installation.....	55
Flush-fit installation .....	56
<b>Worktop cut-out for onset installation</b> .....	57
<b>Worktop cut-out for flush-fit installation</b> .....	60
<b>Spacer bars</b> .....	63
<b>Installation</b> .....	64
Preparing the worktop .....	64
Fitting the spacer bars .....	64
Installing the SmartLine element .....	65
<b>Electrical connection</b> .....	67
<b>After sales service</b> .....	69
Contact in case of malfunction .....	69
Data plate .....	69
Warranty .....	69
<b>Product data sheets</b> .....	70

## Warning and Safety instructions

---

This hob complies with all relevant safety requirements. Inappropriate use can, however, lead to personal injury and damage to property.

To avoid the risk of accidents and damage to the hob, please read these instructions carefully before installation and before using it for the first time. They contain important notes on installation, safety, use and maintenance.

Miele cannot be held liable for damage caused by non-compliance with these instructions.

Keep these instructions in a safe place and ensure that new users are familiar with the content. Pass them on to any future owner.

### Correct application

- ▶ This hob is intended for domestic use and use in other similar environments.
- ▶ This hob is not intended for outdoor use.
- ▶ It is intended for domestic use only to cook food and keep it warm. Any other use is not supported by the manufacturer and could be dangerous.
- ▶ People with reduced physical, sensory or mental capabilities, or lack of experience and knowledge who are not able to use the hob safely on their own must be supervised whilst using it. They may only use it unsupervised if they have been shown how to use it safely and recognise and understand the consequences of incorrect operation.

## Warning and Safety instructions

---

### Safety with children

- ▶ Children under 8 years of age must be kept away from the hob unless they are constantly supervised.
- ▶ Children 8 years and older may only use the hob unsupervised if they have been shown how to use it in a safe way and can recognise and understand the consequences of incorrect operation.
- ▶ Children must not be allowed to clean the hob unsupervised.
- ▶ Please supervise children in the vicinity of the hob and do not let them play with it.
- ▶ The hob gets hot when in use and remains hot for a while after being switched off. Keep children well away from the hob until it has cooled down and there is no danger of burning.
- ▶ Danger of burning.  
Do not store anything which might arouse a child's interest in storage areas above or next to the hob. Otherwise they could be tempted into climbing onto the appliance.
- ▶ Danger of burning or scalding.  
Place pots and pans on the cooking zone in such a way that children cannot pull them down and burn themselves.
- ▶ Danger of suffocation. Packaging, e.g. plastic wrappings, must be kept out of the reach of babies and children. Whilst playing, children could become entangled in packaging or pull it over their head and suffocate.
- ▶ Activate the system lock to ensure that children cannot switch on the hob inadvertently. Use the safety lock when the hob is in use to prevent children from altering the settings selected.

## Technical safety

- ▶ Unauthorised installation, maintenance and repairs can cause considerable danger for the user. Installation, maintenance and repairs must only be carried out by a Miele authorised technician.
- ▶ Do not use a damaged appliance. It could be dangerous. Check the hob for visible signs of damage.
- ▶ Reliable and safe operation of this hob can only be assured if it has been connected to the mains electricity supply.
- ▶ The electrical safety of this hob can only be guaranteed when correctly earthed. It is essential that this standard safety requirement is met. If in any doubt please have the electrical installation tested by a qualified electrician.
- ▶ To avoid the risk of damage to the hob, make sure that the connection data on the data plate (voltage and frequency) match the mains electricity supply before connecting it to the mains. Consult a qualified electrician if in doubt.
- ▶ Do not connect the hob to the mains electrical supply by a multi-socket adapter or extension lead. These are a fire hazard and do not guarantee the required safety of the appliance.
- ▶ For safety reasons, this hob may only be used after it has been built in.
- ▶ This hob must not be used in a non-stationary location (e.g. on a ship).
- ▶ Never open the casing of the hob.  
Touching or tampering with electrical connections or components and mechanical parts is highly dangerous to the user and can cause operational faults.
- ▶ While the hob is under warranty, repairs should only be undertaken by a Miele authorised service technician. Otherwise the warranty is invalidated.

## Warning and Safety instructions

---

- ▶ Miele can only guarantee the safety of the appliance when genuine original Miele replacement parts are used. Faulty components must only be replaced by Miele spare parts.
- ▶ The hob is not intended for use with an external timer switch or a remote control system.
- ▶ If the plug is removed from the connection cable or if the cable is supplied without a plug, the appliance must be connected to the electrical supply by a suitably qualified electrician.
- ▶ If the mains connection cable is damaged, it must be replaced with a special connection cable by an electrician (see “Electrical connection”).
- ▶ The hob must be disconnected from the mains electricity supply during installation, maintenance and repair work. Ensure that power is not supplied to the appliance until after it has been installed or until any maintenance or repair work has been carried out.
- ▶ **Danger of electric shock!**  
Do not use the hob if it is faulty, or if the ceramic surface is cracked, chipped or damaged in any way. Switch it off immediately. Disconnect the hob from the mains electricity supply. Contact Miele Service.
- ▶ If the hob is installed behind a cabinet door, do not close the door while the hob is in use. Heat and moisture can build up behind the closed door. This can result in damage to the hob, the housing unit and the floor. Do not close the door until the residual heat indicators go out.
- ▶ In areas which may be subject to infestation by cockroaches or other vermin, pay particular attention to keeping the appliance and its surroundings clean at all times. Any damage caused by cockroaches or other vermin will not be covered by the warranty.



### Correct use

- ▶ The hob gets hot when in use and remains hot for a while after being switched off. There is a danger of burning until the residual heat indicators go out.
- ▶ Oil and fat can overheat and catch fire. Do not leave the hob unattended when cooking with oil and fat. If it does ignite do not attempt to put the flames out with water.  
Disconnect the hob from the mains and use a suitable fire blanket, saucepan lid, damp towel or similar to smother the flames.
- ▶ Flames could set the grease filters of a cooker hood on fire. Do not flambé under a cooker hood.
- ▶ Spray canisters, aerosols and other inflammable substances can ignite when heated. Therefore do not store such items or substances in a drawer under the hob. Cutlery inserts must be heat-resistant.
- ▶ Do not heat an empty pan.
- ▶ Do not heat up food in closed containers e.g. tins or sealed jars on the hob, as pressure can build up in the container, causing it to explode.
- ▶ Do not cover the hob, e.g. with a hob cover, a cloth or protective foil. The material could catch fire, shatter or melt if the hob is switched on by mistake or if residual heat is still present.
- ▶ When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of any metal items left on the hob heating up, with the danger of burning. Depending on the material, other items left on the hob could also melt or catch fire. Damp pan lids might adhere to the ceramic surface and be difficult to dislodge. Do not use the appliance as a resting place. Switch the cooking zones off after use.

## Warning and Safety instructions

---

- ▶ You could burn yourself on the hot hob. Protect your hands with heat-resistant pot holders or gloves when handling hot pots and pans. Do not let them get wet or damp, as this causes heat to transfer through the material more quickly with the risk of scalding or burning yourself.
- ▶ When using an electrical appliance, e.g. a hand-held food blender, near the hob, ensure that the cable of the electrical appliance cannot come into contact with the hot hob. The insulation on the cable could become damaged.
- ▶ Grains of salt, sugar and sand (e.g. from cleaning vegetables) can cause scratches if they get under pan bases. Make sure that the ceramic surface is clean before placing pans on it.
- ▶ Even a light object can cause damage in certain circumstances. Do not drop anything on the ceramic surface.
- ▶ Placing hot pans on the sensors and indicators could damage the electronics underneath. Do not place hot pans on the sensors or indicators.
- ▶ Do not allow solid or liquid sugar, or pieces of plastic or aluminium foil to get onto the cooking zones when they are hot, as they can damage the ceramic surface when it cools down. If this should occur, switch off the appliance and scrape off all the sugar, plastic or aluminium residues whilst still hot, using a shielded scraper blade. Wear oven gloves. Allow the cooking zones to cool down and clean them with a suitable ceramic hob cleaning agent.
- ▶ Pans which boil dry can cause damage to the ceramic glass. Do not leave the hob unattended whilst it is being used.
- ▶ Only use pots and pans with smooth bases. Rough bases will scratch the ceramic glass.
- ▶ Lift pans into position on the hob. Sliding them into place can cause scuffs and scratches.

## Warning and Safety instructions

---

- ▶ Induction heating works extremely quickly and so the base of the pan could heat up to the temperature at which oil or fat self-ignites within a very short time. Do not leave the hob unattended whilst it is being used.
- ▶ Heat oil or fat for a maximum of one minute. Never use the Booster function to heat oil or fat.
- ▶ For people fitted with a heart pacemaker: Please note that the area immediately surrounding the hob is electromagnetically charged. It is very unlikely to affect a pacemaker. However, if in any doubt, consult the manufacturer of the pacemaker or your doctor.
- ▶ To prevent damage to items which are susceptible to electromagnetic fields, e.g. credit cards, digital storage devices, pocket calculators, etc, do not leave them in the immediate vicinity of the hob.
- ▶ Metal utensils stored in a drawer under the hob can become hot if the appliance is used intensively for a long time. Do not store any metal items or utensils in a drawer under the hob.
- ▶ This hob is fitted with a cooling fan. If a drawer is fitted directly underneath the hob, ensure that there is sufficient space between the drawer and its contents and the underside of the appliance in order to ensure sufficient ventilation of the hob. Do not store pointed or small items or paper in the drawer. They could get in through the ventilation slots or be sucked into the housing by the fan and damage the fan or impair cooling.
- ▶ Never use two pans on a cooking zone, extended zone or Power-Flex zone at the same time.
- ▶ If the cookware only partially covers a cooking or extended zone, the handle could become very hot.  
Always place cookware in the middle of a cooking or extended zone!

## Warning and Safety instructions

---

### Cleaning and care

- ▶ Do not use a steam cleaning appliance to clean this hob. The steam could reach electrical components and cause a short circuit.
- ▶ If the hob is built in over a pyrolytic oven, the hob should not be used whilst the pyrolytic process is being carried out, as this could trigger the overheating protection mechanism on the hob (see relevant section).

### Disposal of the packing material

The packaging is designed to protect the appliance from damage during transportation. The packaging materials used are selected from materials which are environmentally friendly for disposal and should be recycled.

Recycling the packaging reduces the use of raw materials in the manufacturing process and also reduces the amount of waste in landfill sites.

### Disposing of your old appliance

Electrical and electronic appliances often contain valuable materials. They also contain specific materials, compounds and components, which were essential for their correct function and safety. These could be hazardous to human health and to the environment if disposed of with your domestic waste or if handled incorrectly. Please do not, therefore, dispose of your old appliance with your household waste.




Please dispose of it at your local community waste collection / recycling centre for electrical and electronic appliances, or contact your dealer or Miele for advice. You are also responsible (by law, depending on country) for deleting any personal data that may be stored on the appliance being disposed of. Please ensure that your old appliance poses no risk to children while being stored prior to disposal.

# Guide to the appliance

---

## Hob

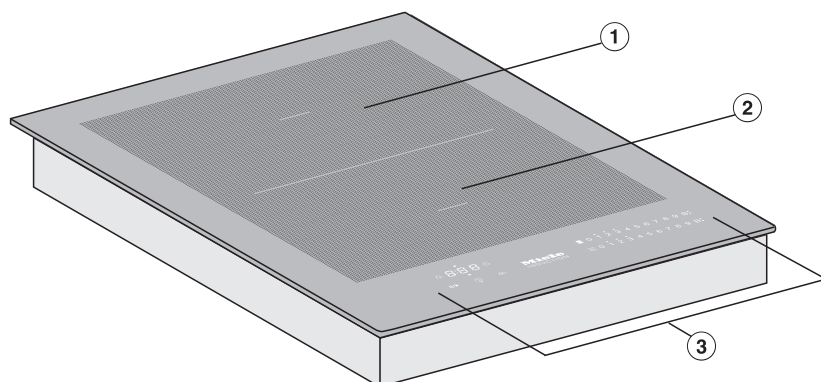


① PowerFlex cooking zone

② PowerFlex cooking zone

①② can be combined to form a PowerFlex cooking area

③ Controls / Indicators

## Controls / Indicators

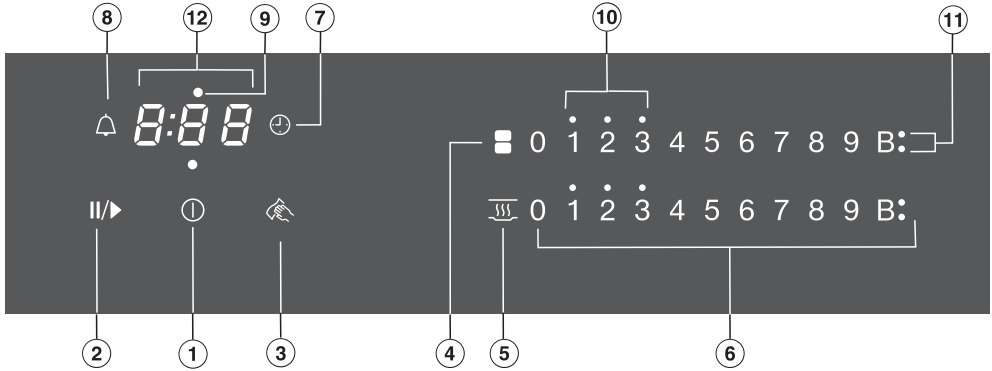

### Sensor controls

- ① Switching the hob on and off
- ② Stop & Go
- ③ Wipe protection
- ④ Switching PowerFlex cooking zones on together/separately
- ⑤ Activating/deactivating the keeping warm function
- ⑥ Numerical keybank  
For setting power levels/minute minder and switch-off times
- ⑦ Automatic switch-off selector for cooking zones
- ⑧ Minute minder

### Indicator lights

- ⑨ Automatic switch-off allocation of cooking zones
- ⑩ Residual heat
- ⑪ Booster
- ⑫ Timer display

<i>0:00</i> to <i>9:59</i>	Duration
<i>LOC</i>	System lock/safety lock activated
<i>dE</i>	Demonstration mode activated

# Guide to the appliance

---

## Cooking zones

Cooking zone	Ø in cm*	Rating in watts for 230 V**	
①	15–23	Normal	2100
		TwinBooster, level 1	3000
		TwinBooster, level 2	3650
②	15–23	Normal	2100
		TwinBooster, level 1	3000
		TwinBooster, level 2	3650
① + ②	22–23 / 15 x 23–23 x 39	Normal	3150
		TwinBooster, level 1	3400
		TwinBooster, level 2	3650
		Total	3650

\* Pans with a base diameter within the given range may be used.

\*\* The wattage quoted may vary depending on the size and material of pans used.



- Please stick the extra data plate for the appliance supplied with this documentation in the space provided in the “After sales service” section of this booklet.
- Remove any protective wrapping and stickers.

### **Cleaning the SmartLine element for the first time**

- Before using for the first time, clean the hob with a damp cloth only and then wipe dry.

### **Switching on the SmartLine element for the first time**

The metal components have a protective coating. Smells and possibly some vapours may occur when the SmartLine element is used for the first time. The heating of the induction coils also causes odours in the first few hours of operation. With each subsequent use, the odour is reduced until it disappears completely.

The smell and any vapours given off do not indicate a faulty connection or appliance and they are not hazardous to health.

Please note that the heating up time on induction hobs is very much shorter than on conventional hobs.

# Induction

## How it works

An induction coil is located under each cooking zone. When a cooking zone is switched on, this coil creates a magnetic field which impacts directly on the base of the pan and heats it up. The cooking zone itself is heated up indirectly by the heat given off by the pan.

An induction cooking zone only works when a pan with a magnetic base is placed on it (see “Pans”). Induction automatically recognises the size of the pan.

The set power level flashes in the numerical keybank for the cooking zone

- if the zone has been switched on without a pan in place, or if the pan is unsuitable (non-magnetic base),
- if the diameter of the base of the pan is too small,
- if the pan is taken off the cooking zone when it is switched on.

If a suitable pan is placed on the cooking zone within 3 minutes, the flashing power level will go out and you can continue as normal.

If no pan or an unsuitable pan is placed on the cooking zone, the cooking zone will switch off automatically after 3 minutes.



When the appliance is switched on either deliberately or by mistake, or when there is residual heat present, there is the risk of any metal items placed on the hob (e.g. cutlery) heating up.

Danger of burning.

Do not use the appliance as a resting place for anything else. Switch the cooking zones off after use with the appropriate sensor controls.

## Noises

When using an induction cooking zone, the following noises can occur in the pan, depending on what it is made of and how it has been constructed.

On the higher power settings, it might buzz. This will decrease or cease altogether when the power setting is reduced.

If the pan base is made of layers of different materials (e.g. in a sandwiched base), it might emit a cracking sound.

Whistling might occur if linked zones (see “Booster”) are being used at the same time, and the pans also have bases made of layers of different materials.

You might hear a clicking sound from the electronic switches, especially on lower power settings.

You might hear a whirring sound when the cooling fan switches on. It switches on to protect the electronics when the hob is being used intensively. The fan may continue to run after the appliance has been switched off.

# Induction

---

## Cookware

### Suitable pans include:

- stainless steel pans with a magnetic base
- enamelled steel pans
- cast iron pans

### Unsuitable pans include:


- stainless steel pans without a magnetic base
- aluminium or copper pans
- glass, ceramic or earthenware pots and pans

To test whether a pot or pan is induction-compatible, hold a magnet to the base of the pan. If the magnet sticks, the pan is generally suitable.

If the pan is unsuitable the set power level will flash in the numerical keybank for the cooking zone.

Please be aware that the properties of the pan base can affect the evenness with which the food heats up (e.g. when making pancakes).

- To make optimum use of the cooking zones, choose pans with a suitable base diameter (see chapter “Cooking zones”). If the pan is too small it will not be recognised and the set power level will flash in the numerical keybank for the cooking zone.
- Use only pots and pans with smooth bases. Rough bases can scratch the ceramic glass.
- Always lift the pans to move them. This will help prevent scratching.
- Please note that the maximum diameter quoted by manufacturers often refers to the diameter of the top rim of the pot or pan. The diameter of the base (generally smaller) is more important.

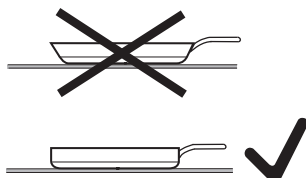

- Where possible, use pans with vertically straight sides. If a pan has angular sides, induction also acts on the sides of the pan. The sides of the pan may discolour or the coating may peel off.

## Tips on saving energy

---

- Use a lid whenever possible to minimise heat loss.
- Select a smaller pan when cooking small quantities. A smaller pan uses less energy than a larger pan with very little in it.
- Cook with as little water as possible.
- Once food has come to the boil or the oil in the pan is hot enough for frying, reduce the heat to a lower setting.
- Use a pressure cooker to reduce cooking times.

## Setting range

The hob is programmed with 9 power levels at the factory. If you wish to fine-tune a setting, you can extend the power setting range to 17 power levels (see “Programming”).

	Setting range	
	Default setting (9 power levels)	Extended settings (17 power levels)
Melting butter Dissolving gelatine Melting chocolate	1–2	1–2.
Making milk puddings	2	2–2.
Warming small quantities of liquid Cooking rice	3	3–3.
Defrosting frozen vegetables	3	2.–3
Making porridge	3	2.–3.
Warming liquid and semi-solid foods Making omelettes or lightly frying eggs Steaming fruit	4	4–4.
Cooking dumplings	4	4–5.
Steaming vegetables and fish	5	5
Defrosting and reheating frozen food	5	5–5.
Gently frying eggs (without overheating the fat)	6	5.–6.
Bringing large quantities of food to the boil, e.g. casseroles. Thickening custard and sauces, e.g. hollandaise	6–7	6.–7
Gently braising meat, fish and sausages (without overheating the fat)	6–7	6.–7.
Frying pancakes, potato fritters etc.	7	6.–7
Cooking stew	8	8–8.
Boiling large quantities of water Bringing to the boil	9	9

These settings should only be taken as a guide. The power of the induction coils will vary depending on the size and material of the pan. For this reason, it is possible that the settings will need to be adjusted slightly to suit your pans. As you use the hob, you will get to know which settings suit your pans best. When using new pans that you are not familiar with, set the power level below the one specified.

### Using the appliance

This SmartLine element is equipped with electronic sensor controls which react to finger contact. For safety reasons, in order to switch the appliance on, the On/Off ① sensor needs to be touched for a little longer than the other sensors.

Each time you touch a sensor, an audible tone sounds.

Only the printed On/Off ① symbol is visible when the SmartLine element is switched off. The other sensor controls light up when the SmartLine element is switched on.

Malfunction due to dirty and/or covered sensor controls.

If the sensor controls are dirty or covered this could cause them to fail to react, to activate a function or even to switch the appliance off automatically (see “Safety switch-off”). Placing hot pans on the sensor controls/indicators can damage the electronic unit underneath.

Keep the sensor controls and indicators clean and do not place anything on top of them. Do not place hot pans on them.

# Operation



**Fire hazard.**

Do not leave the hob unattended whilst it is being used.

Please note that the heating up time on induction hobs is very much shorter than on conventional hobs.

## Switching on the hob

- Touch the ① sensor.

Other sensors will light up.

If no further entry is made, the hob will switch itself off after a few seconds for safety reasons.

## Setting the power level

Permanent pan recognition is activated as standard (see “Programming”). When the hob is switched on and you place a pan on one of the cooking zones, all the sensors for that cooking zone's numerical keybank will light up.

- Place a pan on the cooking zone you want to use.
- Touch the appropriate number sensor for the power level you want.

## Switching off a cooking zone

- To switch off a cooking zone, touch the 0 sensor for that cooking zone.
- To switch off the hob and all the cooking zones, touch the ① sensor.

## Residual heat indicator

If the cooking zone is still hot, the residual heat indicator will light up after the zone has been switched off. Depending on the temperature, a dot will appear above power levels 1, 2 and 3.

The dots of the residual heat indicator will go out one after another as the cooking zone cools down. The last dot only goes out when the cooking zone is safe to touch.



**Danger of burning!**

Do not touch the cooking zones while the residual heat indicators are on.



## Power level setting - Extended setting range

- Touch the numerical keybank in between two number sensors.

The numbers to the left and right of the interim level light up brighter than the others.

Example:

If you have set power level 7, the numbers 7 and 8 will be brighter than the other numbers.

## PowerFlex area

The PowerFlex cooking zones combine automatically to form a PowerFlex cooking area when you place a sufficiently large pot or pan on them (see “Guide to the appliance - Hob”). Settings for the linked cooking area are controlled by the front or left PowerFlex zone (depending on model). The PowerFlex cooking area can also be switched on and off manually.

Position the pan centrally on the PowerFlex cooking area.

## Manually switching PowerFlex cooking zones on together/separately.

- Touch the  or  sensor.

# Operation

## Auto heat-up

When Auto heat-up has been activated, the cooking zone switches on automatically at the highest setting and then switches to the continued cooking setting which you have previously selected. The heat-up time depends on which continued cooking setting has been chosen (see chart).

### Activating Auto heat-up

- Touch the sensor for the continued cooking setting you want until a tone sounds and the sensor starts to pulsate.

During the heat-up time (see chart), the continued cooking level set will pulsate. With extended power levels (see “Programming”), the sensors for the power levels in front of and after the interim power level will pulsate if an extended power level setting has been selected.

Altering the continued cooking setting will deactivate Auto heat-up.

### Deactivating Auto heat-up

- Touch the sensor for the continued cooking setting, or
- Set another power level.

Continued cooking setting	Heat-up time [min : sec]
1	approx. 0 : 15
1.	approx. 0 : 15
2	approx. 0 : 15
2.	approx. 0 : 15
3	approx. 0 : 25
3.	approx. 0 : 25
4	approx. 0 : 50
4.	approx. 0 : 50
5	approx. 2 : 00
5.	approx. 5 : 50
6	approx. 5 : 50
6.	approx. 2 : 50
7	approx. 2 : 50
7.	approx. 2 : 50
8	approx. 2 : 50
8.	approx. 2 : 50
9	—

The continued cooking settings with a dot after the number are only available if the power level range has been extended (see “Programming”).

## Booster

The cooking zones are equipped with a TwinBooster.

When activated, the power is boosted so that large quantities can be heated up quickly, e.g. when boiling water for cooking pasta. The boost in power is active for a maximum of 15 minutes

The Booster function can be used on a maximum of two cooking zones at the same time.

If the Booster function is switched on when

- no power level has been selected, the cooking zone will revert automatically to level 9 at the end of the booster time or if the booster function is switched off before this.
- a power level has been selected, the cooking zone will revert automatically to the power level selected at the end of the booster time or if the booster function is switched off before this.

In each case two cooking zones are linked together in order to provide sufficient power for the Booster. While the Booster is in operation some of the power is taken away from the linked cooking zone. This has one of the following effects:

- Auto-heat-up is deactivated.
- The power level will be reduced.
- The linked cooking zone is switched off.

### Activating TwinBooster, level 1

- Place a pan on the cooking zone you want to use.
- Select a power level if necessary.
- Touch the **B** sensor.

The indicator ● for TwinBooster level 1 lights up.

### Activating TwinBooster, level 2

- Place a pan on the cooking zone you want to use.
- Select a power level if necessary.
- Touch the **B** sensor twice.

The indicator ☉ for TwinBooster level 2 lights up.

### Deactivating TwinBooster

- Touch the **B** repeatedly until the indicators go out, or
- Set another power level.

# Operation

---


## Keeping warm

This function is for keeping food warm which has just been cooked and is still hot. It is not for reheating food that has gone cold.

The maximum duration for keeping food warm is 2 hours.

- Keep food warm in the pan it was cooked in and cover with a lid.
- You do not have to stir food while it is being kept warm.
- Nutrients are lost when food is cooked, and continue to diminish when food is kept warm. The longer food is kept warm for, the greater the loss of nutrients. Try to ensure that food is kept warm for as short a time as possible.

## Activating/deactivating the keeping warm function

- Touch the  sensor for the cooking zone you wish to use.

The SmartLine element has to be switched on if you wish to use the timer. A duration of between 1 minute (0:01) and 9 hours 59 minutes (9:59) can be set.

Times of up to 59 min are shown in minutes (0:59) and times of more than 60 min are shown in hours and minutes. Times are entered in the order of hours, followed by minutes in tens and then units.

Example:


59 min = 0:59, entry: 5-9




80 min = 1:20, entry: 1-2-0

After the first number has been entered the timer display will light up constantly. After the second number has been entered, the first number will move to the left. After the third number has been entered, the first and second numbers will move to the left.

The timer can be used for the following two different functions:

- For setting the minute minder
- For automatically switching off a cooking zone/heating element/Tepan plate zone.

The functions can be used at the same time. The shortest time is always displayed and the  sensor control (minute minder) or the indicator light for automatic switch-off pulsates.

Touch the  or  sensor control if you want to show the remaining times counting down in the background. If more than one switch-off time is programmed, touch the  sensor control repeatedly until the corresponding indicator light pulsates.

## Minute minder

The minute minder is set using the numerical keybank for the (front) left cooking zone.


### To set the minute minder

- Touch the  sensor.


The timer display will start to flash.

- Select the time you require.

### To change the minute minder duration

- Touch the  sensor.
- Select the time you require.

### To delete the minute minder duration

- Touch the  sensor until 0:00 appears in the timer display.

# Timer

---

## Switching off a cooking zone automatically

You can set a time after which the cooking zone will switch off automatically. This function can be used on all cooking zones at the same time.

The switch-off time is set with the numerical keybank for each cooking zone you want to switch off automatically.

If the time programmed is longer than the maximum operational time allowed, the cooking zone will switch off after the maximum time allowed (see "Safety switch-off").

- Select a power setting for the zone you require.
- Touch the ⌚ sensor.

The indicator light will start to flash.

- Select the time you require.
- If you want to set another cooking zone to switch off automatically, follow the same steps as described above.

If more than one switch-off time is programmed, the shortest time remaining will be displayed, and the corresponding indicator light will flash. The other indicator lights will light up constantly.

- If you want to show the time remaining for another zone which is counting down in the background, touch the ⌚ sensor repeatedly until the indicator light for the zone you require flashes.

## To change a switch-off time

- Touch the ⌚ sensor repeatedly until the indicator light for the zone you require flashes.
- Select the time you require.

## To delete a switch-off time

- Touch the ⌚ sensor repeatedly until the indicator light for the zone you require flashes.
- Touch 0 on the numerical keybank.

### Stop & Go

When Stop & Go is activated, the power of all cooking zones in use is reduced to power level 1.

The power levels for the cooking zones and the timer settings cannot be changed, the hob can only be switched off. The minute minder, switch-off, booster and AutoBoost times continue to run.

When Stop&Go is deactivated, the cooking zones will operate at the power level previously selected.

If the function is not deactivated within 1 hour, the hob will switch off.

### Activating/Deactivating

- Touch the II/► sensor control.

### Recall

If the SmartLine element is accidentally switched off during use, you can use this function to restore all the settings. The SmartLine element must be switched on again within 10 seconds.

- Switch the SmartLine element on again.

The previously set power levels flash.

- Press one of the flashing power level indicators immediately.

The appliance will continue to operate using the settings selected previously.

## Additional functions

---

### Wipe protection


You can lock the SmartLine element sensor controls for 20 seconds in order to remove soiling, for example. The ① sensor control is not locked.

#### Activating

- Touch the  sensor control.

The time counts down in the timer display.

#### Deactivating

- Touch the  sensor control until the timer display goes out.

### Demonstration mode

This function enables the SmartLine element to be demonstrated in showrooms without heating up.

#### Activating/deactivating the demonstration mode

- Switch the SmartLine element on.
- Touch the 0 sensor on any of the numerical keybanks.
- Then touch the 0 and 2 sensors at the same time for 6 seconds.

In the timer display, *dE* flashes alternately with *0n* (demonstration mode activated) or *0FF* (demonstration mode deactivated) for a few seconds.

### Displaying the SmartLine element data

The model designation and software version of the SmartLine element can be displayed. To do this there must not be any pots or pans on the SmartLine element.

#### Model designation

- Switch the SmartLine element on.
- Touch the 0 sensor control on any of the numerical keybanks.
- Then touch the 0 and 4 sensor controls at the same time.

The timer display shows 2 numbers flashing alternately:

*12* flashes alternately with *34* = CS 1234

#### Software version

- Switch the SmartLine element on.
- Touch the 0 sensor control on any of the numerical keybanks.
- Then touch the 0 and 3 sensor controls at the same time.

Numbers will appear in the timer display:

*2:00* = software version



### System lock / Safety lock

The lock function is deactivated if there is a break in the mains supply.

Your SmartLine element is equipped with a system lock and a safety lock to prevent the element from being switched on or any settings being altered by mistake.

The **system lock** is activated when the SmartLine element is switched on. If the system lock is activated, the element cannot be switched on and the timer cannot be used. A set minute minder time continues to count down. The SmartLine element is programmed so that the system lock must be activated manually. It can be programmed to be activated automatically 5 minutes after the SmartLine element has been switched off if it is not manually locked first (see “Programming”).

The **safety lock** is activated when the SmartLine element is switched on. When the safety lock is activated, the element can be operated only under certain conditions:

- Selected power levels cannot be changed.
- A set minute minder time can be modified.
- The SmartLine element can only be switched off.

If an unavailable sensor control is touched whilst the system lock or safety lock is activated *LOC* will appear in the timer display for a few seconds and a tone will sound.

#### Activating the system lock

- Touch the ① sensor for 6 seconds.

The time will count down in the timer display. *LOC* will appear once the time has elapsed. The system lock has been activated.

#### Deactivating the system lock

- Touch the ① sensor for 6 seconds.

*LOC* will appear briefly in the timer display and then the time will count down. The lock function is deactivated once the time has elapsed.

# Safety features

---

## Activating the safety lock

- Touch and hold the ⌚ and II/► sensors at the same time for 6 seconds.

The time will count down in the timer display. *LOC* will appear once the time has elapsed. The safety lock is activated.

## Deactivating the safety lock

- Touch and hold the ⌚ and II/► sensors at the same time for 6 seconds.

*LOC* will appear briefly in the timer display and then the time will count down. Once the time has elapsed the lock function is deactivated.

## Safety switch-off

### Safety switch-off if the sensors are covered

Your SmartLine element will turn off automatically if one or several of the sensor controls remain covered for longer than 10 seconds, for example, by finger contact, food boiling over or by an object such as an oven glove or tea towel. ① flashes briefly above the *F* sensor control and a tone will sound. If you remove the obstruction and/or clean the hob, *F* goes out and the SmartLine element is ready for use again.

### Safety switch-off with an overlong cooking time

The safety switch-off mechanism is triggered automatically if one of the cooking zones is heated for an unusually long period of time. This period of time depends on the power level selected. Once exceeded, the cooking zone switches off and the residual heat indicators appear. The cooking zone can be operated again after it has been switched off and back on.

The hob is programmed to safety setting 0 at the factory. If necessary, a higher safety setting with a shorter maximum operating time can be set (see chart).

Power level*	Maximum operating time [h:min]		
	Safety setting		
	0**	1	2
1	10:00	8:00	5:00
1.	10:00	7:00	4:00
2/2.	5:00	4:00	3:00
3/3.	5:00	3:30	2:00
4/4.	4:00	2:00	1:30
5/5.	4:00	1:30	1:00
6/6.	4:00	1:00	0:30
7/7.	4:00	0:42	0:24
8	4:00	0:30	0:20
8.	4:00	0:30	0:18
9	1:00	0:24	0:10

\* The power levels with a dot after the number are only available if the power level range has been extended (see “Setting range”).

\*\* Factory default setting

# Safety features

---

## Overheating protection

All the induction coils and cooling elements for the electronics are fitted with an overheating protection mechanism. Before the induction coils or cooling elements get too hot, the overheating protection mechanism cuts in in one of the following ways:

### Induction coils

- Any Booster function in operation will be switched off.
- The set power level will be reduced.
- The cooking zone switches off automatically. *Err* flashes in the timer display alternating with *44*.

You can use the cooking zones again as usual when the fault code has gone out.

### Cooling elements

- Any booster function in operation will be switched off.
- The set power level will be reduced.
- The cooking zones switch off automatically.

The affected cooking zones can only be used again as usual once the cooling element has cooled down to a safe level.

The overheating protection mechanism can be triggered by:

- Heating up an empty pan.
- Fat or oil being heated on a high power level.
- Insufficient ventilation to the underside of the hob.
- A hot cooking zone being switched on after an interruption to the power supply.

If, despite removing the cause, the overheating protection mechanism triggers again, contact Miele.

You can adapt the programming of the SmartLine element to your personal needs. Several settings can be altered in succession.

After accessing the programming mode, the ⌚ symbol and *PC* will appear in the timer display. After a few seconds *P:01* (programme 01) will flash alternately with *C:01* (code) in the timer display.

## Changing the programming

### Calling up programming

- **With the SmartLine element switched off**, press and hold the ⌚ and II/▶ sensor controls together until the ⌚ symbol lights up and *PC* is shown in the timer display.

### Setting the programme

For a two-digit programme number you need to first set the tens position.

- Touch the ⌚ sensor control repeatedly until the programme number you want appears in the display, or touch the appropriate number on the numerical keybank.

### Setting the code

- Touch the ⌚ sensor control repeatedly until the code number you want appears in the display, or touch the appropriate number on the numerical keybank.

### Saving the settings

- While the programme is showing in the display (e.g. *P:01*) touch the ⌚ sensor control until the indicators go out.

### To avoid saving the settings

- Touch the II/▶ sensor control until the indicators go out.

# Programming

Programme <sup>1)</sup>		Code <sup>2)</sup>	Settings
<b>P:01</b>	Demonstration mode	<b>C:00</b>	Demonstration mode off
		C:01	Demonstration mode on <sup>3)</sup>
<b>P:03</b>	Factory setting	<b>C:00</b>	Do not restore standard settings
		C:01	Restore standard settings
<b>P:04</b>	Number of power levels	<b>C:00</b>	9 power levels
		C:01	17 power levels <sup>4)</sup>
<b>P:06</b>	Keypad tone when a sensor is touched	C:00	Off <sup>5)</sup>
		C:01	Quiet
		C:02	Medium
		<b>C:03</b>	Loud
<b>P:07</b>	Audible tone for the timer	C:00	Off <sup>5)</sup>
		C:01	Quiet
		C:02	Medium
		<b>C:03</b>	Loud
<b>P:08</b>	System lock	<b>C:00</b>	System lock can only be activated manually
		C:01	System lock activated automatically
<b>P:09</b>	Maximum operating time	<b>C:00</b>	Safety setting 0
		C:01	Safety setting 1
		C:02	Safety setting 2
<b>P:12</b>	Sensor controls reaction speed	C:00	Slow
		<b>C:01</b>	Normal
		C:02	Rapid

Programme <sup>1)</sup>		Code <sup>2)</sup>	Settings
<b>P:15</b>	Permanent pan recognition	C:00	Not active
		<b>C:01</b>	Active

<sup>1)</sup> Unlisted programmes are not assigned.

<sup>2)</sup> The factory setting is shown in bold.

<sup>3)</sup> After the SmartLine element has been switched on *dE* appears in the timer display for a few seconds.

<sup>4)</sup> In the text and charts, the extended power levels are shown with a dot after the number for better understanding.

<sup>5)</sup> The tone which sounds when the On/Off sensor control is touched cannot be switched off.

## Cleaning and care



**Danger of burning.**

The cooking zones must be switched off. The hob must have cooled down.



**Danger of injury.**

The steam from a steam cleaning appliance could reach electrical components and cause a short circuit.

Do not use a steam cleaner to clean the hob.

The use of unsuitable cleaning agents can cause the surfaces to discolour or alter.

All surfaces are susceptible to scratching.

Remove any cleaning agent residues immediately.

Allow the SmartLine element to cool down before cleaning.

- Clean the SmartLine element and accessories after each use.
- Dry the SmartLine element thoroughly after every cleaning to avoid limescale residue.

### Unsuitable cleaning agents

To avoid damaging the surfaces of your appliance, do not use:

- washing-up liquid
- cleaning agents containing soda, alkalines, ammonia, acids or chlorides
- cleaning agents containing descaling agents
- stain and rust removers
- abrasive cleaning agents, e.g. powder cleaners and cream cleaners
- solvent-based cleaning agents
- dishwasher cleaner
- oven sprays
- glass cleaning agents
- hard, abrasive brushes or sponges, e.g., pot scourers, brushes or sponges which have been previously used with abrasive cleaning agents
- eraser blocks

**Risk of damage from sharp and pointed objects!**

Do not clean the area between the ceramic surface and the worktop with sharp, pointed objects.



Not all soiling and residues can be removed using a solution of washing-up liquid.

An invisible film can develop that can lead to discolouration of the ceramic glass. This discolouration cannot be removed.

Clean the ceramic surface regularly with a suitable ceramic cleaning agent.

- Remove any coarse soiling with a damp cloth and more stubborn soiling with a scraper blade suitable for use on glass.
- Then clean the ceramic glass surface with the Miele ceramic and stainless steel hob cleaner (see "Optional accessories") or with a commercially available ceramic glass cleaner applied with kitchen paper or a clean cloth. Do not apply the cleaner while the hob is still hot, as this can result in marking. Please follow the cleaning agent manufacturer's instructions.
- Finally wipe the ceramic surface with a damp cloth and polish with a soft, dry cloth.

Residues can burn onto the hob the next time it is used and cause damage to the ceramic surface. Ensure that all cleaning agent residues are removed.



Danger of burning.

Wear oven gloves when removing residues of sugar, plastic or aluminium foil from a hot ceramic surface with a scraper blade.

- Should any **sugar, plastic or aluminium foil** spill or fall onto the hot ceramic surface while it is in use, switch off the cooking zone.
- Then carefully scrape off these residues **immediately** whilst they are still hot, using a scraper blade suitable for use on glass.
- Afterwards, clean the ceramic surface in its cooled state, as described above.

- **Spots** caused by limescale, water and aluminium residues (spots with a metallic appearance) can be removed using Miele's ceramic and stainless steel hob cleaner.

## Problem solving guide

---

Many malfunctions and faults that can occur in daily operation can be easily remedied. Time and money will be saved because a service call will not be needed.

The following guide may help you to find the reason for a malfunction or a fault, and to correct it.

Problem	Cause and remedy
<b>The SmartLine element cannot be switched on.</b>	There is no power to the SmartLine element. ■ Check whether the mains fuse has tripped. Contact an electrician or Miele Service (for the minimum fuse rating, see data plate).
	There may be a technical fault. ■ Disconnect the appliance from the mains electricity supply for approx. 1 minute by – tripping the relevant mains fuse or screwing the fuse out completely, or – switching off the residual current protection device. ■ If, after resetting the trip switch in the mains fuse box or the residual current protection device, the appliance will still not turn on, contact a qualified electrician or Miele Service.
<b>A smell and vapours are given off when the new appliance is being used.</b>	The metal components have a protective coating. When the appliance is used for the first time, this causes a smell and possibly also vapour. The material from which the induction coils are made also gives off a smell in the first few hours of operation. This smell will be less noticeable with each subsequent use before dissipating completely. The smell and any vapour given off do not indicate a faulty connection or appliance and they are not hazardous to health.
<b>The power level selected is flashing.</b>	There is no pan on the cooking zone, or the pan is unsuitable. ■ Use a suitable pan (see “Pans”).

## Problem solving guide

Problem	Cause and remedy
After the SmartLine element has been switched on or a sensor control has been touched, <i>LOC</i> appears in the timer display for a few seconds.	<p>The system lock or safety lock is activated.</p> <ul style="list-style-type: none"> <li>■ Deactivate the system lock or safety lock (see “System lock / Safety lock”).</li> </ul>
The SmartLine element has switched off automatically. When the element is switched back on, an <i>F</i> appears above the On/Off sensor control ①.	<p>One or more of the sensor controls are covered, e.g. by finger contact, food boiling over or an object.</p> <ul style="list-style-type: none"> <li>■ Clean off any dirt or remove the object (see “Safety switch-off”).</li> </ul>
After the SmartLine element has been switched on <i>dE</i> appears in the timer display for a short while. The SmartLine element does not heat up.	<p>The SmartLine element is in demonstration mode.</p> <ul style="list-style-type: none"> <li>■ Touch the 0 and 2 sensor controls at the same time until <i>dE</i> flashes alternately with <i>OFF</i> in the timer display.</li> </ul>
A cooking zone switches off automatically.	<p>It has been operated for too long.</p> <ul style="list-style-type: none"> <li>■ You can use the cooking zone again by switching it back on (see “Safety switch-off”).</li> </ul>
A cooking zone or the whole hob switches off automatically.	<p>The overheating protection mechanism has been activated.</p> <ul style="list-style-type: none"> <li>■ See “Overheating protection”.</li> </ul>
The Booster has deactivated early automatically.	<p>The overheating protection mechanism has been activated.</p> <ul style="list-style-type: none"> <li>■ See “Overheating protection”.</li> </ul>
The cooking zone is not working in the usual way on the power setting selected.	<p>The overheating protection mechanism has been activated.</p> <ul style="list-style-type: none"> <li>■ See “Overheating protection”.</li> </ul>

## Problem solving guide

Problem	Cause and remedy
<b>Power level 9 is automatically reduced if you select power level 9 on two linked cooking zones at the same time.</b>	<p>Operating both zones at power level 9 would exceed the permitted maximum power for the two zones.</p> <ul style="list-style-type: none"> <li>■ Use a different cooking zone.</li> </ul>
<b>The food in the pan does not heat up when the Auto heat-up function is switched on.</b>	<p>A large amount of food is being heated up.</p> <ul style="list-style-type: none"> <li>■ Start cooking at the highest power level and then turn down to a lower one manually later on.</li> </ul>
	<p>The pan is not conducting heat properly.</p> <ul style="list-style-type: none"> <li>■ Use a different pot or pan which conducts heat properly.</li> </ul>
<b>An operating noise can be heard after the SmartLine element has been switched off.</b>	<p>The cooling fan runs until the SmartLine element has cooled down and then switches off automatically.</p>
<b>The sensor controls show increased sensitivity or fail to react.</b>	<p>The sensitivity level of the sensor controls has changed.</p> <ul style="list-style-type: none"> <li>■ Make sure that there is no direct light (from the sun or from an artificial source) falling onto the SmartLine element. The area surrounding the SmartLine element must not be too dark.</li> <li>■ Take any pans off the SmartLine element and wipe away any food deposits. Ensure that there is nothing covering the entire SmartLine element unit or sensor controls.</li> <li>■ Interrupt the power supply to the SmartLine element for approx. 1 minute.</li> <li>■ If the problem persists after power has been restored, please contact Miele Service.</li> </ul>
<b><i>Err</i> flashes alternately with 30 in the timer display and a tone will sound.</b>	<p>The SmartLine element is connected incorrectly.</p> <ul style="list-style-type: none"> <li>■ Disconnect the SmartLine element from the mains.</li> <li>■ Contact Miele Service.</li> </ul>
<b>1 and a number, e.g. 1-0 flashes alternately with a 3 digit number in the timer display.</b>	<p>Cooking zone fault</p> <ul style="list-style-type: none"> <li>■ Interrupt the power supply to the SmartLine element for approx. 1 minute.</li> <li>■ If the problem persists after power has been restored, please contact Miele Service.</li> </ul>

Problem	Cause and remedy
In the timer display <i>Err</i> flashes alternately with numbers.	<p><i>Err44</i> The overheating protection mechanism has been activated.</p> <ul style="list-style-type: none"> <li>■ See “Overheating protection”.</li> </ul>
	<p><i>Err47</i>, <i>Err48</i> or <i>Err49</i> The fan is blocked or defective.</p> <ul style="list-style-type: none"> <li>■ Make sure it has not been blocked by something like a fork. Remove the cause of the blockage.</li> <li>■ If this fault code continues to appear in the display, contact Miele Service.</li> </ul>
	<p><i>Err</i> and other numbers There is a fault in the electronic module.</p> <ul style="list-style-type: none"> <li>■ Interrupt the power supply to the SmartLine element for approx. 1 minute.</li> <li>■ If the problem persists after power has been restored, please contact Miele Service.</li> </ul>

## Optional accessories

---

Miele offer a comprehensive range of useful accessories as well as cleaning and conditioning products for your Miele appliances.

These products can be ordered through the Miele Webshop.


They can also be ordered from Miele (see end of this booklet for contact details) or from your Miele dealer.

### **Ceramic and stainless steel hob cleaner 250 ml**



Removes heavy soiling, limescale deposits and aluminium residues

### **Microfibre cloth**



Removes finger marks and light soiling

## Safety instructions for installation


Fit the wall units and cooker hood before fitting the SmartLine element to avoid damaging it.

- ▶ The veneer or laminate coatings of worktops (or adjacent kitchen units) must be treated with 100 °C heat-resistant adhesive which will not dissolve or distort. Any backmoulds must be of heat-resistant material.
- ▶ The SmartLine element must not be installed over a fridge, fridge-freezer, freezer, dishwasher, washing machine, washer-dryer or tumble dryer.
- ▶ This SmartLine element must not be installed above ovens or cookers unless these have a built-in cooling down fan.
- ▶ After installation, the mains connection cable of the SmartLine element must not come into contact with any moving kitchen component (e.g. a drawer) or be subject to mechanical loads which could damage it.
- ▶ Observe carefully the safety clearances listed on the following pages.

# Safety distances

---

## Safety distance above the SmartLine element

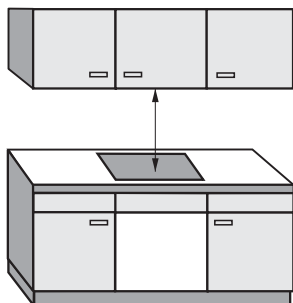

The safety distance specified by the manufacturer of the cooker hood must be maintained between the SmartLine element and the cooker hood above it.

If combustible objects are installed above the SmartLine element (e.g. cabinets, utensil rail, etc.), a minimum safety distance of 600 mm must be maintained.

When two or more SmartLine elements which have different safety distances are installed together below a cooker hood, you should observe the greatest safety distance.



## Safety distances to the sides and back of the hob

The SmartLine element should preferably be installed with plenty of space on the right and left.


The minimum distance ① specified below must be observed between the rear of the SmartLine element and a tall unit or room wall.

The minimum distance ②, ③ specified below must be adhered to between one side of the SmartLine element (right or left) and a tall unit or room wall. A minimum distance of 300 mm must be observed on the opposite side.


① Minimum distance between the **back** of the worktop cut-out and the rear edge of the worktop: 50 mm

② Minimum distance on the **right** side between the worktop cut-out and the closest adjacent piece of furniture (e.g. tall unit) or a room wall: 50 mm.


③ Minimum distance on the **left** side between the worktop cut-out and the closest adjacent piece of furniture (e.g. tall unit) or a room wall: 50 mm.

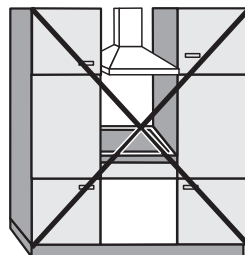


Not allowed

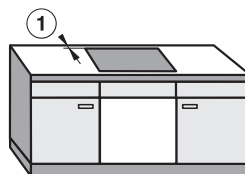

Recommended

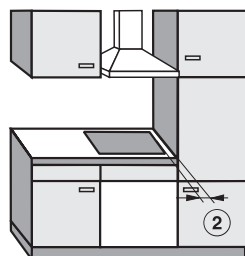

Not recommended

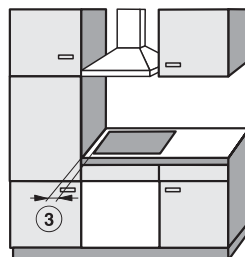

Not recommended

# Safety distances

---

## Minimum safety distances underneath the element

To ensure proper ventilation of the SmartLine element, a minimum clearance is required between the element and an oven, interim shelf, or drawer.

The minimum clearance from the lower edge of the SmartLine element to

- The upper edge of an **oven** is **15 mm**.
- The upper edge of an **interim shelf** is **15 mm**.
- The base of a **drawer** is **75 mm**.

## Interim shelf

It is not necessary to fit an interim shelf underneath the SmartLine element but one may be fitted if you wish.

Leave a gap of 10 mm at the back of the shelf to accommodate the mains connection cable. We recommend a gap at the front of the SmartLine element of 20 mm to ensure good ventilation.

## Safety distance when installing the appliance near a wall with additional niche cladding

If a niche cladding is installed, a minimum safety distance must be maintained between the worktop cut-out and the cladding, since high temperatures can damage these materials.


If the niche cladding is made from a combustible material (e.g. wood) a minimum safety distance ⑤ of 50 mm must be maintained between the worktop cut-out and the cladding.

If the niche cladding is made from a non-combustible material (e.g. metal, natural stone, ceramic tiles) the minimum safety distance ⑤ between the worktop cut-out and the cladding will be 50 mm less the thickness of the cladding.


Example: 15 mm niche cladding

50 mm - 15 mm = minimum safety distance of 35 mm

### Flush-fit installation

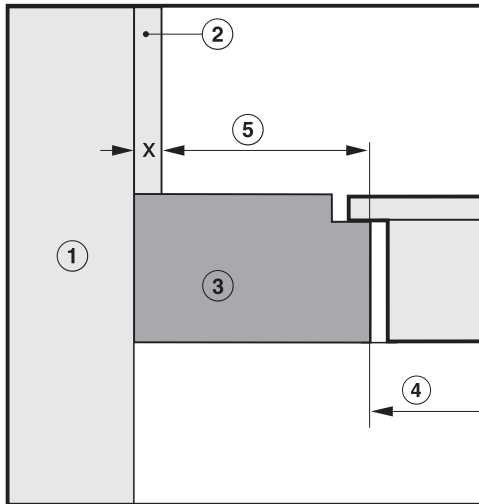

### Onset installation

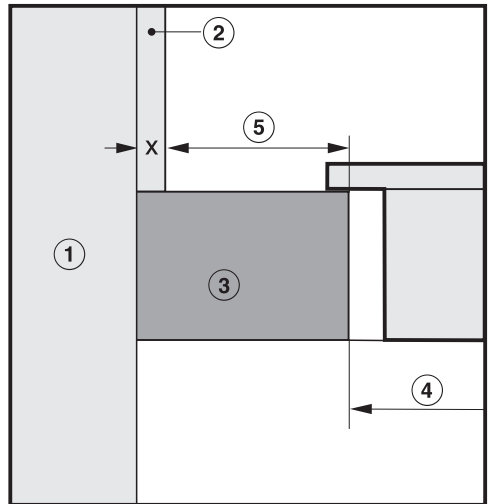


- ① Masonry
- ② Niche cladding dimension x = thickness of the niche cladding material
- ③ Worktop
- ④ Worktop cut-out
- ⑤ Minimum distance to
  - combustible** materials 50 mm
  - non-combustible** materials 50 mm - dimension x

# Installation notes

All dimensions are given in mm.

## Onset installation


### Sealing between the SmartLine Element and the worktop

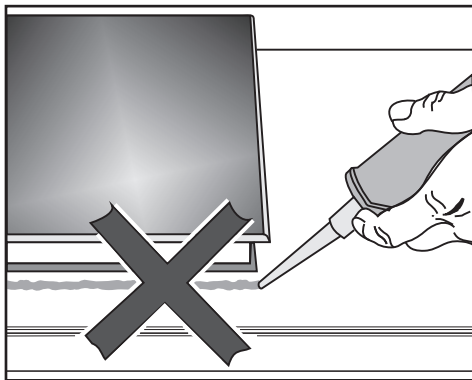

The SmartLine element and worktop may be damaged if the element needs to be removed after it has been sealed with a sealant.

Do not use any sealant between the SmartLine element and the worktop. The seal under the edge of the top part of the appliance provides a sufficient seal for the worktop.

## Tiled worktop

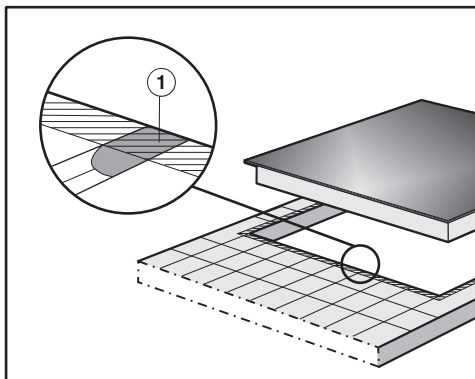

Grout lines ① and the hatched area underneath the SmartLine element frame must be smooth and even. If they are not, the SmartLine element will not sit flush with the worktop and the sealing strip underneath the top part of the appliance will not provide a good seal between the appliance and the worktop.

### Flush-fit installation

Flush-fit installation is only possible in natural stone (granite, marble), solid wood and tiled worktops. For installation in worktops made of other materials, please consult the relevant manufacturer as to whether their worktops are suitable for flush-fit installation.

The internal width of the base unit underneath the appliance must be at least as wide as the inner worktop cut-out (see “Cut-out dimensions for flush-fit installation”), so that the SmartLine element is easily accessible from underneath after installation and the bottom half of the casing can be removed for maintenance. If the element is not freely accessible from below after installation, the sealant must be removed so that the element can be removed.

The SmartLine element is

- directly installed in a suitable cut-out in a natural stone worktop,
- secured in a suitable cut-out in solid wood and tiled worktops with a wooden support frame. The frame must be provided on site, and is not supplied with the appliance.

# Installation notes

---

## Installing several SmartLine elements


The gaps between the individual SmartLine elements are sealed with a silicone sealant that is heat-resistant to at least 160 °C. With flush-fit installation, the gap between the SmartLine element(s) and the worktop must also be sealed with a silicone sealant that is heat-resistant to at least 160 °C.

After installation, the SmartLine elements must be easily accessible from below, so that the bottom half of the casing can be removed for maintenance. If the SmartLine elements are not accessible from below, the sealant must be removed so that they can be removed.

## Combination with a downdraft extractor

If the SmartLine element is installed in combination with a downdraft extractor, the latter must be installed first.


## Onset installation

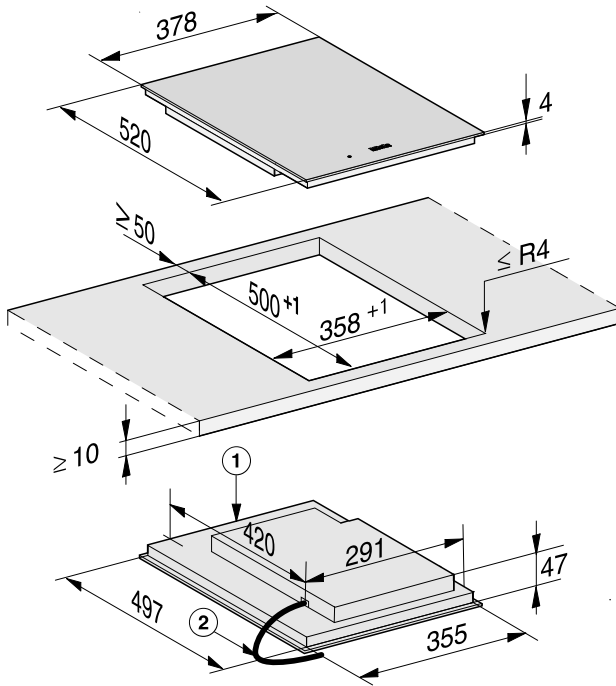

- ① Front
- ② Mains connection cable, L = 2000 mm

# Building-in dimensions


## Flush-fit installation

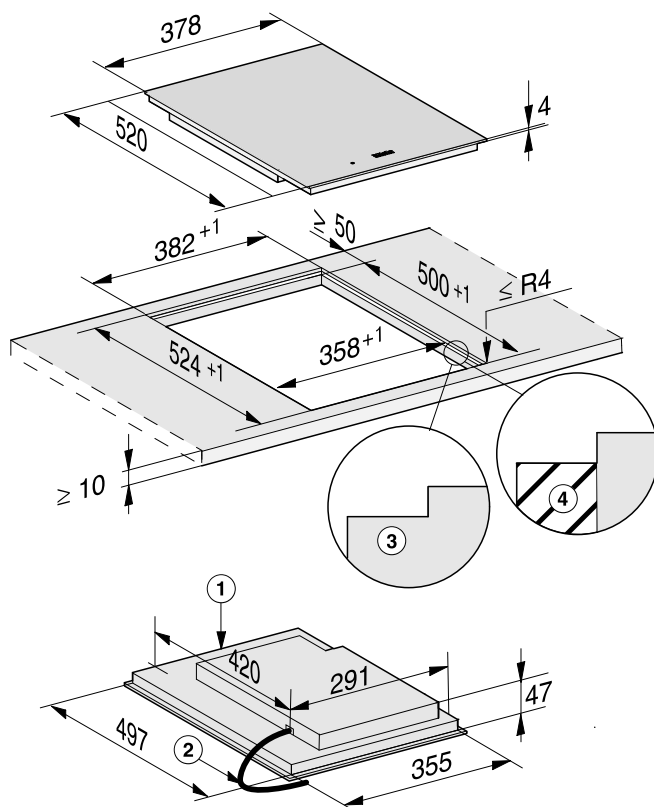

- ① Front
- ② Mains connection cable, L = 2000 mm
- ③ Stepped cut-out (for detailed illustrations, see “Worktop cut-out for flush-fit installation”)
- ④ 12 mm wooden frame (not supplied, for detailed illustrations, see “Worktop cut-out for flush-fit installation”)



# Worktop cut-out for onset installation

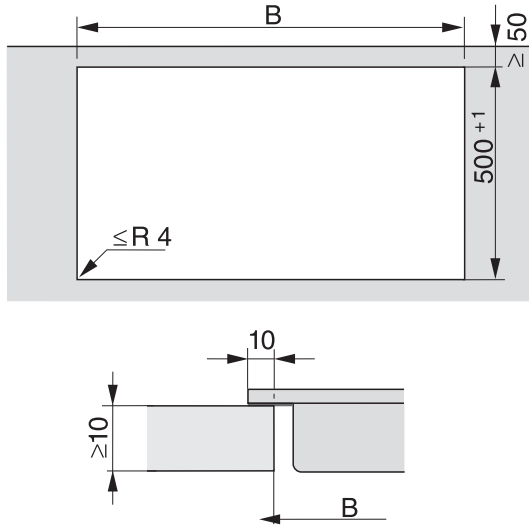

## Information for calculating the cut-out

The elements overlap the worktop by 10 mm.

When installing several elements, a distance of 2 mm must be observed between the individual elements.

### Calculating cut-out dimension **B**




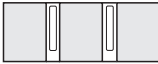



1 element = width of the element minus 10 mm on the right, minus 10 mm on the left

Several elements = total width of the elements plus 2 mm distance between the elements, minus 10 mm on the right, minus 10 mm on the left.

Some examples are illustrated below.







# Worktop cut-out for onset installation

## Installation with a downdraft extractor


Sample combinations	Number x width [mm]		Dimension B [mm]
	Cooking elements	Downdraft extractor	
	1 x 378	1 x 120	480 <sup>+1</sup>
	2 x 378	1 x 120	860 <sup>+1</sup>
	1 x 378 1 x 620	2 x 120	1224 <sup>+1</sup>
	3 x 378	2 x 120	1362 <sup>+1</sup>
	2 x 378 1 x 620	2 x 120	1604 <sup>+1</sup>
	4 x 378	2 x 120	1742 <sup>+1</sup>
	1 x 620	2 x 120	844 <sup>+1</sup>

## Worktop cut-out for onset installation

### Installation without a downdraft extractor

Sample combinations	Number x width [mm] Cooking elements	Dimension B [mm]
	1 x 378	358 <sup>+1</sup>
	2 x 378	738 <sup>+1</sup>
	1 x 378 1 x 620	980 <sup>+1</sup>
	3 x 378	1118 <sup>+1</sup>
	2 x 378 1 x 620	1360 <sup>+1</sup>
	4 x 378	1498 <sup>+1</sup>

# Worktop cut-out for flush-fit installation

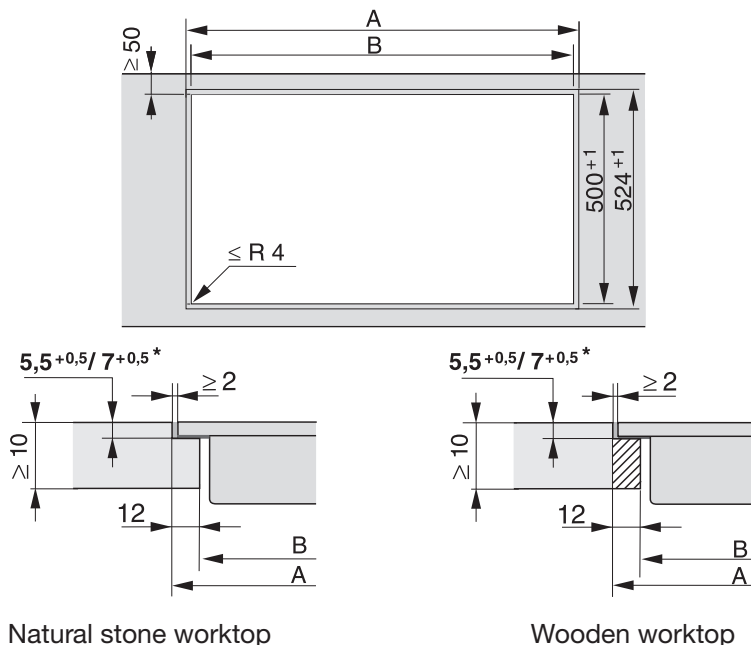

Natural stone worktop

Wooden worktop

\*  $7^{+0,5}$  mm for CS 7611

## Information for calculating the cut-out

The elements overlap the worktop by 10 mm.

When installing several elements, a distance of 2 mm must be observed between the individual elements.

Calculating cut-out dimension **A**

1 element = width of the element plus 2 mm on the right, plus 2 mm on the left.




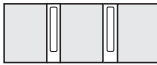



Several elements = total width of the elements plus 2 mm distance between the elements, plus 2 mm on the right, plus 2 mm on the left

Calculating cut-out dimension **B** = cut-out dimension A minus 12 mm on the right, minus 12 mm on the left.

Some examples are illustrated below.







# Worktop cut-out for flush-fit installation

## Installation with a downdraft extractor

Sample combinations	Number x width [mm]		Dimension A [mm]	Dimension B [mm]
	Cooking elements	Downdraft extractor		
	1 x 378	1 x 120	504 <sup>+1</sup>	480 <sup>+1</sup>
	2 x 378	1 x 120	884 <sup>+1</sup>	860 <sup>+1</sup>
	1 x 378 1 x 620	2 x 120	1248 <sup>+1</sup>	1224 <sup>+1</sup>
	3 x 378	2 x 120	1386 <sup>+1</sup>	1362 <sup>+1</sup>
	2 x 378 1 x 620	2 x 120	1628 <sup>+1</sup>	1604 <sup>+1</sup>
	4 x 378	2 x 120	1766 <sup>+1</sup>	1742 <sup>+1</sup>
	1 x 620	2 x 120	868 <sup>+1</sup>	844 <sup>+1</sup>

# Worktop cut-out for flush-fit installation

## Installation without a downdraft extractor

Sample combinations	Number x width [mm] Cooking elements	Dimension A [mm]	Dimension B [mm]
	1 x 378	382 <sup>+1</sup>	358 <sup>+1</sup>
	2 x 378	762 <sup>+1</sup>	738 <sup>+1</sup>
	1 x 378 1 x 620	1004 <sup>+1</sup>	980 <sup>+1</sup>
	3 x 378	1142 <sup>+1</sup>	1118 <sup>+1</sup>
	2 x 378 1 x 620	1384 <sup>+1</sup>	1360 <sup>+1</sup>
	4 x 378	1522 <sup>+1</sup>	1498 <sup>+1</sup>


## Spacer bars

When installing several SmartLine elements, an additional spacer bar must be fitted in between the individual elements.


The clips supplied with the spacer bars are only required for installing the CSDA.

### Installing 3 elements and 2 spacer bars

## Onset installation

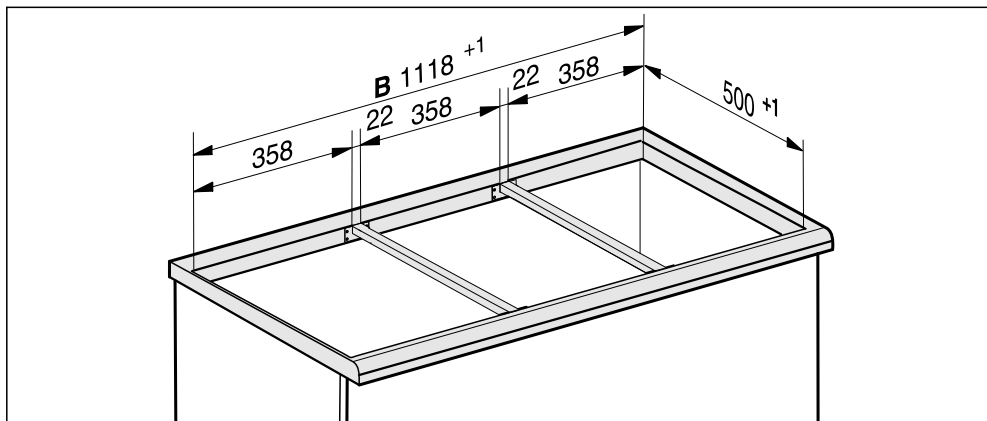

## Flush-fit installation

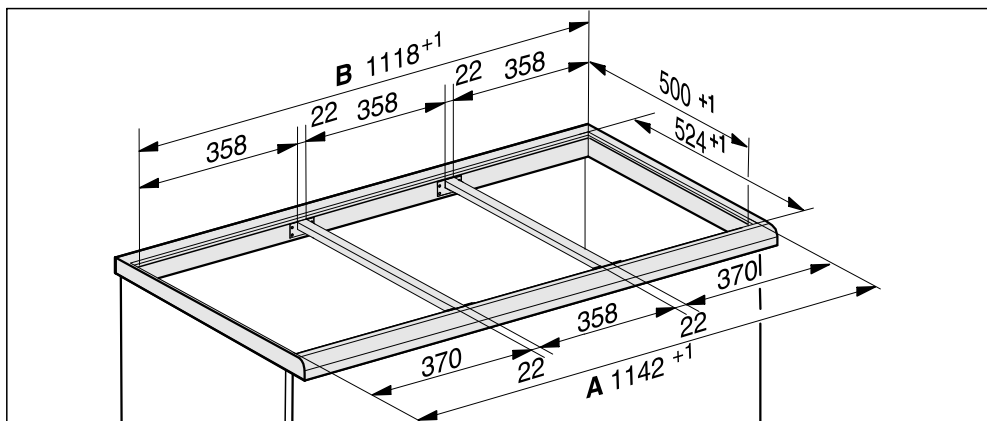

# Installation

## Preparing the worktop

- Create the worktop cut-out. Remember to maintain the minimum safety distances (see “Safety distances”).
- Seal any cut surfaces on **wooden worktops** with a special varnish, silicone rubber or resin to prevent the wood from swelling as a result of moisture. The sealant must be temperature-resistant.

Make sure that the sealant does not come into contact with the top of the worktop.



## Flush-fit installation

- For wooden worktops, secure the wooden frames 5.5 mm below the upper edge of the worktop. For CS 7611, the wooden frame must be secured 7 mm under the upper edge of the worktop.

## Fitting the spacer bars

Use the middle screw holes if one of the following SmartLine elements is installed to the right or left of the spacer bar: CS 7611, CS 7101, CS 7102

### Wooden worktops

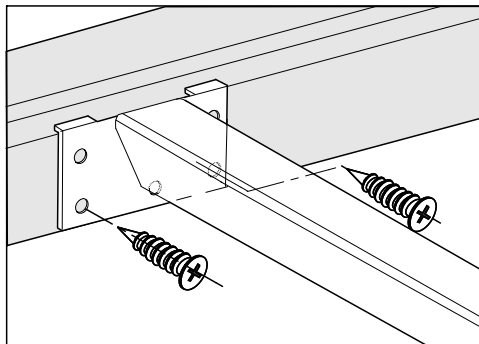
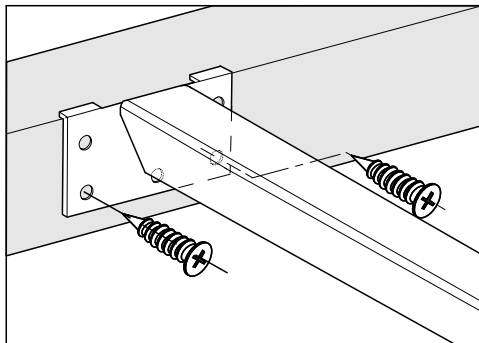


- Position the spacer bars flush onto the upper edge of the cut-out or onto the lower step of the stepped cut-out.
- Secure the spacer bars with the 3.5 x 25 mm wood screws supplied.



## Natural stone worktops

You will need heavy-duty double-side tape (not supplied) to secure the spacer bars.

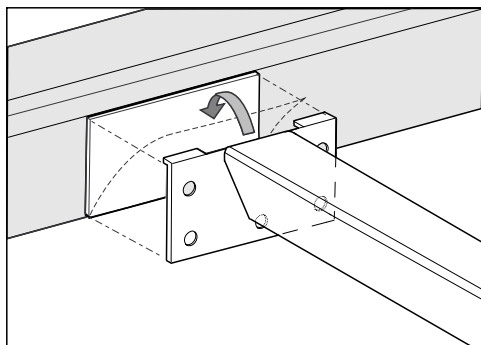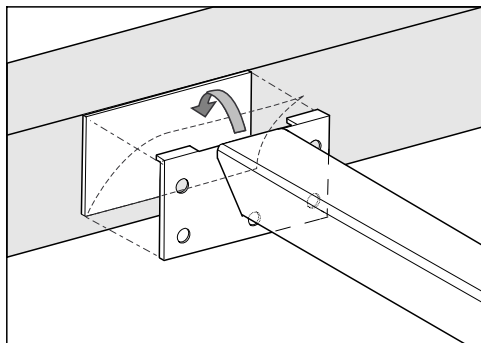

- Stick the tape onto the upper edge of the cut-out or onto the lower step of the stepped cut-out.
- Position the spacer bars flush onto the upper edge of the cut-out or onto the lower step of the stepped cut-out.
- Press the spacer bars firmly into place.

## Installing the SmartLine element

- Stick the supplied sealing strip under the edge of the SmartLine element. Do not apply the sealing strip under tension.
- Feed the mains connection cable down through the cut-out.
- Position the SmartLine element in the worktop cut-out. When doing this make sure that the seal of the appliance sits flush with the worktop on all sides. This is important to ensure an effective seal all round.

## Onset installation

- If the seal does not meet the worktop correctly on the corners, carefully scribe the corner radii ( $\leq R4$ ) with a jigsaw.

Do not use any additional sealant (e.g. silicone) on the SmartLine element.

- Connect the SmartLine element to the mains.
- If required, connect the SmartLine element to the gas supply (see "Gas connection").
- Check that the SmartLine element works.
- Seal the gaps between the individual elements with a silicone sealant that is heat-resistant to at least 160 °C.

# Installation

---

## Flush-fit installation

- Connect the SmartLine element to the mains.
- If required, connect the SmartLine element to the gas supply (see “Gas connection”).
- Check that the SmartLine element works.
- Seal the gaps between the individual elements and between the elements and the worktop with a silicone sealant that is heat-resistant to at least 160 °C.

Unsuitable sealant can damage natural stone.

For natural stone worktops and natural stone tiles, only use silicone sealant that is specially formulated for natural stone. Please follow the manufacturer's instructions.



### **Danger of injury!**

Installation, repairs and other work by unqualified persons could be dangerous. Miele cannot be held liable for unauthorised work.

Miele cannot be held liable for damage or injury caused by unauthorised installation, maintenance or repair work, or by an inadequate or faulty on-site earthing system (e.g. electric shock).

The SmartLine element must be connected to the mains electricity supply by a suitably qualified and competent person, in strict accordance with current national and local safety regulations.

After installation ensure that all electrical components are shielded and cannot be accessed by users.

### **Total power rating**

See data plate

### **Connection data**

The connection data is quoted on the data plate. Please ensure these match the household mains supply.

### **Residual current device**

For extra safety, it is advisable to protect the SmartLine element with a suitable residual current device (RCD) with a trip range of 30 mA.

### **WARNING!**

**THIS APPLIANCE MUST BE EARTHED**

### **Disconnecting devices**

It must be possible to disconnect the SmartLine element from the mains at all poles using disconnecting devices! A contact distance of at least 3 mm must be observed in the switched-off state! The disconnecting devices are overcurrent protection devices and residual current protection devices.

# Electrical connection

---

## Disconnecting from the mains



Danger of electric shock.

After disconnection, ensure the appliance cannot be switched back on by mistake.

To disconnect the appliance from the mains power supply, do one of the following depending on installation:

### Safety fuses

- Completely remove fuses

### Automatic circuit breakers

- Press the (red) button until the middle (black) button springs out.

### Built-in circuit breakers

- Circuit breakers, type B or C: switch the on-off switch from 1 (on) to 0 (off).

### Residual current device (RCD)

- Switch the main switch from 1 (on) to 0 (off) or press the test button.

## Replacing the mains connection cable



Danger of electric shock!

The mains connection cable must only be fitted by a suitably qualified electrician.

When replacing the mains connection cable, please use cable type H 05 V2V2-F with a suitable cross-section. These cables are available from the manufacturer or from the Miele Spare Parts Department.

### Contact in case of malfunction

In the event of any faults which you cannot remedy yourself, please contact your Miele Dealer or Miele Service.

Contact information for Miele Service can be found at the end of this document.

Please note that telephone calls may be monitored and recorded for training purposes and that a call-out charge will be applied to service visits where the problem could have been resolved as described in this booklet.

Please quote the model and serial number of your appliance when contacting Miele. This information can be found on the data plate.

### Data plate

Stick the extra data plate supplied with the appliance here. Make sure that the model number matches the one specified on the back cover of this document.



### Warranty

The appliance warranty is valid for 2 years from date of purchase. In the UK, you must activate your cover by calling 0330 160 6640 or registering online at [www.miele.co.uk](http://www.miele.co.uk).

For further information on country specific warranty terms and conditions, please refer to your warranty booklet or contact Miele Customer Service.

## Product data sheets

---

The following data sheets apply to the models described in this operating instruction manual.

### Information for domestic electric hobs

In acc. with regulation (EU) No. 66/2014

<b>MIELE</b>	
<b>Model name / identifier</b>	CS 7612
Number of cooking zones and/or areas	1
For circular cooking zones: diameter of useful surface area/cooking zone For non-circular cooking zones or areas: length and width of useful surface area per electric cooking zone or area	1. = 230x390 mm 2. = 3. = 4. = 5. = 6. =
Energy consumption per cooking zone or area calculated per kg ( $EC_{\text{electric cooking}}$ )	1. = 184,6 Wh/kg
Energy consumption for the hob calculated per kg ( $EC_{\text{electric hob}}$ )	184,6 Wh/kg

## United Kingdom

Miele Co. Ltd.  
Fairacres, Marcham Road  
Abingdon, Oxon, OX14 1TW  
Customer Contact Centre Tel: 0330 160 6600  
E-mail: [mielecare@miele.co.uk](mailto:mielecare@miele.co.uk)  
Internet: [www.miele.co.uk](http://www.miele.co.uk)

## Australia

Miele Australia Pty. Ltd.  
ACN 005 635 398  
ABN 96 005 635 398  
1 Gilbert Park Drive  
Knoxfield, VIC 3180  
Tel: 1300 464 353  
Internet: [www.miele.com.au](http://www.miele.com.au)

## China

Miele (Shanghai) Trading Ltd.  
1-3 Floor, No. 82 Shi Men Yi Road  
Jing' an District  
200040 Shanghai, PRC  
Tel: +86 21 6157 3500  
Fax: +86 21 6157 3511  
E-mail: [info@miele.cn](mailto:info@miele.cn)  
Internet: [www.miele.cn](http://www.miele.cn)

## Miele (Hong Kong) Limited

41/F - 4101, Manhattan Place  
23 Wang Tai Road  
Kowloon Bay, Hong Kong  
Tel: (852) 2610 1025  
Fax: (852) 3579 1404  
Email:  
[customerservices@miele.com.hk](mailto:customerservices@miele.com.hk)  
Website: [www.miele.hk](http://www.miele.hk)

## India

Miele India Pvt. Ltd.  
Ground Floor  
Copia Corporate Suites  
Plot No. 9, Jasola  
New Delhi - 110025  
Tel: 011-46 900 000  
Fax: 011-46 900 001  
E-mail: [customercare@miele.in](mailto:customercare@miele.in)  
Internet: [www.miele.in](http://www.miele.in)

**Manufacturer:** Miele & Cie. KG, Carl-Miele-Straße 29, 33332 Gütersloh, Germany

# Miele

## Ireland

Miele Ireland Ltd.  
2024 Bianconi Avenue  
Citywest Business Campus  
Dublin 24  
Tel: (01) 461 07 10  
Fax: (01) 461 07 97  
E-Mail: [info@miele.ie](mailto:info@miele.ie)  
Internet: [www.miele.ie](http://www.miele.ie)

## Malaysia

Miele Sdn Bhd  
Suite 12-2, Level 12  
Menara Sapura Kencana  
Petroleum  
Solaris Dutamas No. 1  
Jalan Dutamas 1  
50480 Kuala Lumpur, Malaysia  
Phone: +603-6209-0288  
Fax: +603-6205-3768

## New Zealand

Miele New Zealand Limited  
IRD 98 463 631  
Level 2, 10 College Hill  
Freemans Bay, Auckland 1011  
New Zealand  
Tel: 0800 464 353  
Internet: [www.miele.co.nz](http://www.miele.co.nz)

## Singapore

Miele Pte. Ltd.  
163 Penang Road  
# 04 - 03 Winsland House II  
Singapore 238463  
Tel: +65 6735 1191  
Fax: +65 6735 1161  
E-Mail: [info@miele.com.sg](mailto:info@miele.com.sg)  
Internet: [www.miele.sg](http://www.miele.sg)

## South Africa

Miele (Pty) Ltd  
63 Peter Place, Bryanston 2194  
P.O. Box 69434, Bryanston 2021  
Tel: (011) 875 9000  
Fax: (011) 875 9035  
E-mail: [info@miele.co.za](mailto:info@miele.co.za)  
Internet: [www.miele.co.za](http://www.miele.co.za)

## Taiwan

K.E. & Kingstone Co., Ltd.  
6th Fl., No. 120, Sec. 2  
Jianguo N. Rd.  
Taipei, Taiwan  
TEL: +886 2 2502-7256  
FAX: +886 2 2502-3077  
E-mail: [kenk@kenk.com.tw](mailto:kenk@kenk.com.tw)  
Website:  
[www.kenk.com.tw/ke/miele](http://www.kenk.com.tw/ke/miele)

## Thailand

BHIRAJ TOWER at EmQuartier  
43rd Floor Unit 4301-4303  
689 Sukhumvit Road  
North Klongton Sub-District  
Vadhana District  
Bangkok 10110, Thailand

## United Arab Emirates

Miele Appliances Ltd.  
Gold & Diamond Park  
Office No. 6-217  
Sheikh Zayed Road  
P.O. Box 11 47 82 - Dubai  
Tel. +971 4 3044 999  
Fax. +971 4 3418 852  
800-MIELE (64353)  
E-Mail: [info@miele.ae](mailto:info@miele.ae)  
Website: [www.miele.ae](http://www.miele.ae)

CS 7612

en-GB

M.-Nr. 10 758 370 / 04