

CI262105

Optional accessories

CA050300:

Flex pan set, 3 pcs.

CA051300:

Teppan Yaki (large)

CA051301:

Teppan Yaki

CA052300:

Griddle Plate

CA055300: Flex pan large

CA230100:

Magnetic knob, black

GP900001:

System pan diameter 15 cm

GP900002:

System pan diameter 19 cm

GP900003:

Frying sensor pan Ø 21 cm

GP900004:

System pan diameter 28 cm

Installation accessories

Flex induction cooktop 200 series 60 cm

CI262105

Frameless for flush mounting

Flex function for combining the rectangular cooking areas

Free positioning of cookware inside combined cooking areas with automatic extension up to 30 cm width

Cooking sensor function for temperature control in pots

Professional cooking function for splitting the cooktop into predefined heat areas

Frying sensor function for temperature control in

Twist-Pad control with removable magnetic knob Easy control of all functions with bicoloured display

Cooking zones

2 flex induction cooking areas 23x19 cm (2200 W, with booster 3700 W), linked together 23x38 cm (3300 W, with booster 3700 W), with automatic extension up to 30x30 cm (3300 W, with booster 3700 W).

2 flex induction cooking areas 23x19 cm (2200 W, with booster 3700 W), linked together 23x38 cm (3300 W, with booster 3700 W), with automatic extension up to 30x30 cm (3300 W, with booster 3700 W).

Handling

Twist-Pad control with removable magnetic knob.

User friendly control with bicoloured display (white / orange).

Cooking zone and cooking area marking. Electronic power control in 17 output levels.

Flex function for rectangular cooking areas. Professional cooking function.

Cooking sensor function (in use with cooking sensor CA 060 300).

Frying sensor function.

Booster function for pots.

Booster function for pans.

Keep warm function.

Stopwatch.

Cooking timer for up to 99 minutes.

Short-term timer.

Options menu.

Power management.

Selected digital services (Home Connect)

Cooktop-based ventilation control (with suitable

Remote monitoring.

Remote diagnostics.

Home network integration for digital services (Home Connect) wireless via WiFi.

The use of the Home Connect functionality depends on the Home Connect services, which are not available in every country. For further information please check: home-connect.com.

Safety

Main switch.

Operation indicator.

Pot detection.

2-stage residual heat indication.

Child lock. Safety shut-off.

Planning notes

Installation is possible in worktops made of stone, synthetics or solid wood. Heat resistance and watertight sealing of the cut edges must be observed. Concerning other materials please consult the worktop manufacturer.

Operates with magnetic (induction) iron pots and pans only. For an optimal heat distribution, the use of sandwich bottom cookware is recommended.

Special accessories (order as spare parts):

Part No. 17006018 Frying sensor pan, ø 20 cm Part No. 17006184 Frying sensor pan, ø 24 cm Part No. 17006185 Frying sensor pan, ø 28 cm


The wok pan WP 400 001 cannot be used with this appliance.

Appliance must be fixed from underneath. Appliance weight: approx. 15 kg.

Connection

Total connected load 7.4 KW. Connecting cable 1.5 m without plug. Power consumption standby/display off 0.5 W. Power consumption standby/network 2.0 W. Please check the user manual for how to switch off the WiFi module.




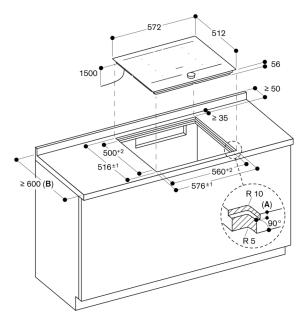

- A: $6.5^{+0.5}$ B: Please check the installation manual if the worktop depth is less than 600 mm.

measurements in mm


Longitudinal section

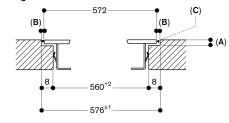

- A: 6.5^{+0.5}
 B: 2.5
 C: Fill with silicone


measurements in mm

View from above

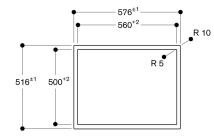

measurements in mm

Cross-section

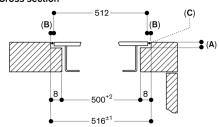

- A: 6.5^{+0.5}
 B: 2.5
 C: Fill with silicone

measurements in mm